

HOTCHKIS[®] **HOTCHKIS** **SPORT SUSPENSION**

Application Guide

“Horsepower for your Suspension[®]”

877.466.7655 • Hotchkis.net

All About

The experience of John Hotchkis and the entire Hotchkis Performance team ensures that you receive high quality products engineered to perform and designed to be strong. Our suspension controls many of the fastest cars in the country, from 8-second quarter mile Grand Nationals, Mustangs and Chevelles to canyon carving, street cruising Camaros, Monte Carlos, Impala SS's and Corvettes. Numerous road racing, drag racing, and autocross racing teams rely and win with Hotchkis Performance products. When the best magazines choose suspension products, Hotchkis Performance is there. Just ask the editors of Hot Rod, Motor Trend, Car Craft, Chevy High Performance, Super Chevy, Street Trucks, and Truckin'.



Dear Fellow Car Enthusiast,

Thank you for your support and continued loyalty. It is hard to believe that it has been two decades since Hotchkis Performance products were first introduced to the aftermarket. We have grown tremendously since then because we have continued to pursue our original design goal to produce the highest quality suspension components that dramatically improve the handling, stability, and traction of Muscle Cars, trucks, European cars, and Japanese import cars. Our TVS (Total Vehicle System) suspension kits are a complete handling solution that contains engineered and tuned components that work together to improve your performance vehicle's handling. All of these kits have passed our rigorous in-house testing procedures including slalom, skid pad, autocross and road course testing, and quarter mile testing. We are proud to say that the majority of our staff's personal vehicles are equipped with Hotchkis Performance products and these are the people you will talk to on the phone for answers to your technical questions. You can be confident that as Hotchkis Performance continues to grow and expand that we will continue to produce the best suspension products available. We welcome your input and comments through email or by phone.

See you on the road!

John Hotchkis

The Hotchkis Performance Advantage

Hotchkis Sport Suspension draws upon over 30 years of racing experience to develop the most effective bolt-on suspension systems available. Our suspension packages have been engineered to deliver the race-winning performance you demand while remaining comfortable enough for use on the street. All Hotchkis suspension components go through an extensive development process that starts with the latest in computer-aided design, modeling, and engineering and ends with real world performance testing. Every Hotchkis component undergoes extensive testing on the race track including the 600-foot slalom, 200-foot skidpad, and 1.3-mile road course.

The Total Vehicle System

The Hotchkis Total Vehicle System (TVS) is a complete handling solution for your vehicle. Available as a Stage 1 or Stage 2 package, Hotchkis TVS kits are designed to deliver the maximum handling from your ride and make choosing the right parts for the job a breeze. No more mixing and matching parts - with a TVS suspension package every component is designed to complement the others and will work right the first time. These tuned suspension packages eliminate the poor ride quality and disappointing handling that often results from the use of mismatched components from multiple manufacturers.



Table of Contents

TVS Packages	4-13
A-Arms	
<i>Lower & Upper, Strut Rods, Pivot Shaft Kits</i>	14-17
Accessories	
<i>Battery Trays & Hold Downs, Sway Bar Brackets</i>	18-21
Alignment	
<i>Camber Plate and Link Kits</i>	22
Chassis Stiffeners and Sub-Frame Connectors	23-24
Hotchkis Tuned Shocks	25-28
Performance Springs	29-35
Rear Suspension	
<i>Panhard Rods, Lower Trailing Arms, T-Mount Braces, Rear Suspension Packages</i>	36-41
Rebuild Kits	
<i>Trailing Arm Swivel and Bushing Upgrades, Camber Plate & Link, End Link, Spring, Boot & Strut Rod, Sway Bar, Suspension Rebuild Kits</i>	42-55
Sway Bar	56-64
Steering Rebuild Kits	
<i>Center Links, Ball Joints, Machined Tie Rod Sleeves, Adjustable Steering Rod Kits, Idler Arms, Pitman Arms</i>	65-72
Tech Tips	73-75

Hotchkis Total Vehicle System (TVS) Packages

The Hotchkis TVS is an all inclusive package designed and tested as a complete system solution. Using our TVS system guarantees that all the suspension components are thoroughly engineered and designed to work together as a complete suspension system for ultimate handling and performance improvement. Our completely tuned suspension package eliminates the poor performance that often results from the use of components produced by different manufactures. Testing and matching our suspension components ensures you purchase our finest balanced handling and performance package.

Stage 1 TVS Packages

Hotchkis Sport Suspension Stage 1 TVS package consist of our Sport Coil Springs and Sway Bars engineered to work together for superior street and track handling. Our Stage I packages also make your car ride extremely well and have the right stance for a fantastic look.

Stage 2 TVS Packages

Hotchkis Stage 2 TVS kits have been rigorously designed and tested on the track yet are very comfortable for your local cruise in. Every aspect of the suspension has been re-engineered for the maximum performance and is being offered in a complete tuned package. In front we start with Tubular Upper and Lower A-Arms which increase caster and improve the camber curve creating more front end grip and traction. Heavy duty tie rod sleeves hold the alignment, lowered sport springs and Hotchkis Tuned shocks improve vehicle control and stance. To stiffen the chassis we include our sub frame connectors. All the necessary premium hardware is included creating a complete package. This system is a proven autocross winner and designed for maximum performance improvement in an installer friendly kit. Proudly designed, track tested and manufactured in the USA.



MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1967-1967	Skylark w/ Big Block	HP TVS Kit	80003
Buick	1967-1967	Skylark w/ Big Block	HP TVS Kit Extreme	89003
Buick	1967-1967	Skylark w/ Small Block	Stg 2 HP TVS Kit Extrm	89004-2
Buick	1964-1966	Skylark w/ Big Block	Stg 2 HP TVS Kit Extrm	89001-2
Buick	1964-1966	Skylark w/ Small Block	HP TVS Kit	80002
Buick	1964-1966	Skylark w/ Big Block	HP TVS Kit Extreme	89001
Buick	1964-1966	Skylark w/ Small Block	HP TVS Kit Extreme	89002
Buick	1964-1966	Skylark w/ Small Block	HP TVS Kit Extreme	89004
Buick	1964-1966	Skylark w/ Small Block	Stg 2 HP TVS Kit Extrm	89002-2
Buick	1964-1966	Skylark w/ Big Block	Stg 2 HP TVS Kit Extrm	89003-2
Buick	1968-1970	Skylark w/ Big Block	HP TVS Kit Extreme	89005
Buick	1968-1970	Skylark w/ Small Block	HP TVS Kit Extreme	89006
Buick	1968-1970	Skylark w/ Big Block	Stg 2 HP TVS Kit Extrm	89005-2
Buick	1968-1970	Skylark w/ Small Block	Stg 2 HP TVS Kit Extrm	89006-2
Buick	1971-1972	Skylark w/ Big Block	HP TVS Kit Extreme	89007
Buick	1971-1972	Skylark w/ Small Block	HP TVS Kit Extreme	89008
Buick	1971-1972	Skylark w/ Big Block	Stg 2 HP TVS Kit Extrm	89007-2
Buick	1971-1972	Skylark w/ Small Block	Stg 2 HP TVS Kit Extrm	89008-2
Buick	1978-1987	Grand National, Regal w/ Sm Blk 1" Drop	Stg 2 HP TVS Kit Extrm	89009-2
Chevrolet	1967-1967	El Camino, Malibu, Chevelle w/ Small Block	Stg 2 HP TVS Kit Extrm	89004-2
Chevrolet	1967-1967	El Camino, Malibu, Chevelle, Monte Carlo w/ Big Block	HP TVS Kit Extreme	89003
Chevrolet	1967-1967	El Camino, Malibu, Monte Carlo w/Bg Blk	HP TVS Kit	80003
Chevrolet	2010-2011	Camaro SS	HP TVS Kit Track Pack	80116
Chevrolet	1963-1972	C-10 2wd	HP TVS Kit	80390
Chevrolet	1964-1966	El Camino, Malibu, Chevelle w/ Small Block	HP TVS Kit Extreme	89002
Chevrolet	1964-1966	El Camino, Malibu, Chevelle w/ Small Block	HP TVS Kit Extreme	89004
Chevrolet	1964-1966	El Camino, Malibu, Chevelle w/ Big Block	Stg 2 HP TVS Kit Extrm	89001-2
Chevrolet	1964-1966	El Camino, Malibu, Chevelle w/ Small Block	Stg 2 HP TVS Kit Extrm	89002-2
Chevrolet	1964-1966	El Camino, Malibu, Chevelle w/ Big Block	Stg 2 HP TVS Kit Extrm	89003-2
Chevrolet	1967-1967	El Camino, Malibu, Monte Carlo	HP TVS Kit	80003

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo w/Sml Blk	HP TVS Kit	80002
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block	HP TVS Kit Extreme	89001
Chevrolet	1967-1969	Camaro w/ Big Block & Alum Heads. Pontiac Big Block Motors should also use this Small Block Application	HP TVS Kit	80015
Chevrolet	1967-1969	Camaro w/ Big Block & Alum Heads. Pontiac Big Block Motors should also use this Small Block Application	Stg 2 HP TVS Kit Extrm	80015-2
Chevrolet	1967-1969	Camaro w/ Big Block & Alum Heads. Pontiac Big Block Motors should also use this Small Block Application	Stg 2 HP TVS Kit Extrm	80015-2CV
Chevrolet	1967-1969	Camaro Convertible w/ Bg Blk. Pontiac Motors or Big Blocks w/ Alum Heads use Small Block Application.	Stg 2 HP TVS Kit Extrm	80014-2CV
Chevrolet	1967-1969	Camaro Convertible w/ Small Block. Pontiac Big Block Motors should also use this Small Block Application	Stg 2 HP TVS Kit Extrm	80015-2CV
Chevrolet	1967-1969	Camaro Convertibles w/ Small Block. Recommended for Small Block Motors & Pontiac BB Motors or Big Blocks with Aluminum Heads	Stg 2 HP TVS Kit Extrm	80035-2CV
Chevrolet	1967-1969	Camaro Coupe w/ Small Block. Pontiac Big Block Motors should also use this Small Block Application	Stg 2 HP TVS Kit Extrm	80015-2
Chevrolet	1967-1969	Camaro Coupes w/ Small Block. Recommended for Small Block Motors & Pontiac BB Motors or Big Blocks with Aluminum Heads	Stg 2 HP TVS Kit Extrm	80035-2

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1969	Camaro w/ Small Block	HP TVS Kit	80035
Chevrolet	1967-1969	Camaro w/ Bg Blk. Pontiac Motors or Big Blocks w/ Alum Heads use Small Block Application.	Stg 2 HP TVS Kit Extrm	80014-2
Chevrolet	1967-1969	Camaro/Firebird w/ Big Block Motors with Alum Heads, and Alum Manifold or Pontiac 400 Motors should use this Small Block Application	HP TVS Kit	80015
Chevrolet	1968-1970	El Camino, Malibu, Chevelle w/ Big Block	HP TVS Kit Extreme	89005
Chevrolet	1968-1970	El Camino, Malibu, Chevelle w/ Small Block	HP TVS Kit Extreme	89006
Chevrolet	1968-1970	El Camino, Malibu, Chevelle w/ Big Block	Stg 2 HP TVS Kit Extrm	89005-2
Chevrolet	1968-1970	El Camino, Malibu, Chevelle w/ Small Block	Stg 2 HP TVS Kit Extrm	89006-2
Chevrolet	1968-1974	Chevy Nova w/ Big Block Motor. Cars with Big Block Motor and Aluminum Heads Should Use Small Block Application	HP TVS Kit	80012
Chevrolet	1968-1974	Nova w/ Small Block	HP TVS Kit	80013
Chevrolet	1970-1973	Camaro Coupes w/ Big Block. Recommended for Big Block Cars and Pontiac 7.5L/455 CI Big Block. Pontiac Motors Under 7.5L/455 CI and Big Blocks with Aluminum Heads Should Use Small Block Application	Stg 2 HP TVS Kit Extrm	80016-2
Chevrolet	1970-1973	Camaro Coupes w/ Small Block motors. Recommended for Small Block Cars Including Pontiac Big Block Motors Under 7.5 L/455 CI	Stg 2 HP TVS Kit Extrm	80017-2
Chevrolet	1970-1981	Camaro w/ Small Block	HP TVS Kit	80016
Chevrolet	1971-1972	El Camino, Malibu, Chevelle w/ Big Block	HP TVS Kit Extreme	89007

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1971-1972	El Camino, Malibu, Chevelle w/ Small Block	HP TVS Kit Extreme	89008
Chevrolet	1971-1972	El Camino, Malibu, Chevelle w/ Big Block	Stg 2 HP TVS Kit Extrm	89007-2
Chevrolet	1971-1972	El Camino, Malibu, Chevelle w/ Small Block	Stg 2 HP TVS Kit Extrm	89008-2
Chevrolet	1974-1976	Camaro Coupes w/ Big Block. Recommended for Big Block Cars and Pontiac 7.5L/455 CI Big Block. Pontiac Motors Under 7.5L/455 CI and Big Blocks with Aluminum Heads Should Use Small Block Application	Stg 2 HP TVS Kit Extrm	80016-24
Chevrolet	1974-1976	Camaro Coupes w/ Small Block. Recommended for Small Block Cars Including Pontiac Big Block Motors Under 7.5 L/455 CI	Stg 2 HP TVS Kit Extrm	80017-24
Chevrolet	1974-1976	Camaro Coupes w/ Small Block. Recommended for Small Block Cars Including Pontiac Big Block Motors Under 7.5 L/455 CI	Stg 2 HP TVS Kit Extrm	80017-27
Chevrolet	1977-1981	Camaro Coupes w/ Big Block. Recommended for Big Block Cars and Pontiac 7.5L/455 CI Big Block. Pontiac Motors Under 7.5L/455 CI and Big Blocks with Aluminum Heads Should Use Small Block Application	Stg 2 HP TVS Kit Extrm	80016-27
Chevrolet	1978-1983	El Camino, Malibu, Monte Carlo w/Sm Blk 1" Drop	Stg 2 HP TVS Kit Extrm	89009-2
Chevrolet	1978-1988	A/G Body w/ Big Block	HP TVS Kit	80009
Chevrolet	1982-1992	Camaro w/ Small Block	HP TVS Kit	80018
Chevrolet	1982-1992	Camaro w/ Small Block	HP TVS Kit	80019
Chevrolet	1993-1997	Camaro w/ Small Block	HP TVS Kit	80021
Chevrolet	1993-1997	Camaro w/ Small Block	HP TVS Kit	80022
Chevrolet	1993-1997	Camaro w/ Small Block	HP TVS Kit	80024
Chevrolet	1993-1997	Camaro	HP TVS Kit	80025
Chevrolet	2010-2012	Camaro	Stage 1 HP TVS Kit	80115-1

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	2010-2012	Camaro	HP TVS Kit Race Pack	80117
Chevrolet	2011-2012	Camaro Convertibles	Stage 1 HP TVS Kit	80119-1
Chevrolet	2011-2012	Camaro Convertibles	Stg 2 HP TVS Kit Extrm	80119-2
Chevrolet	2011-2012	Camaro Convertibles	Stg 3 HP TVS Kit Rc Pk	80119-3
Chrysler	2005-2008	300	Stage 1 HP TVS Kit	80101-1
Chrysler	2005-2008	300 V6	Stage 1 HP TVS Kit	80101-1
Chrysler	2005-2008	300C	Stage 1 HP TVS Kit	80101-1
Chrysler	2005-2009	2005-2009 300C	Stage 1 HP TVS Kit	80105-1
Dodge	1966-1969	Charger, Coronet	HP TVS Kit	80110
Dodge	1966-1969	Super Bee	HP TVS Kit	80110
Dodge	1967-1972	A-Body	HP TVS Kit	80113
Dodge	1970-1970	Charger	HP TVS Kit	80110-70
Dodge	1970-1974	Challenger	HP TVS Kit	80111
Dodge	1973-1976	Dart	HP TVS Kit	80114
Dodge	2005-2008	Charger V6, Magnum	Stage 1 HP TVS Kit	80101-1
Dodge	2005-2009	Charger SRT8.	Stage 1 HP TVS Kit	80105-1
Dodge	2005-2009	Magnum	Stage 1 HP TVS Kit	80105-1
Dodge	2006-2009	Charger	Stage 1 HP TVS Kit	80104-1
Dodge	2006-2009	Charger SRT8	Stage 1 HP TVS Kit	80105-1
Dodge	2008-2010	Challenger SRT8	Stage 1 HP TVS Kit	80107-1
Dodge	2009-2010	Challenger RT. Lowering springs cannot be used w/out changing the struts on models with self-leveling suspension.	Stage 1 HP TVS Kit	80108-1
Dodge	2011-2012	Challenger RT	Stage 1 HP TVS Kit	80120-1RS
Dodge	2011-2012	Challenger. Note: Some models come equipped with self leveling shock absorbers. Models with self leveling shock will need to upgrade rear shocks in order to lower vehicle.	Stage 1 HP TVS Kit	80120-1
Dodge	2011-2013	Charger RT. Lowering springs cannot be used w/out changing struts on cars with leveling suspension	Stage 1 HP TVS Kit	80111-1
Dodge	2011-2013	Charger RT. Lowering springs cannot be used w/out changing struts on cars with leveling suspension.	Stage 1 HP TVS Kit	80111-1RS

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	2011-2013	Charger RT. Lowering springs cannot be used w/out changing struts on cars with leveling suspension.	Stage 1 HP TVS Kit	80111-1RS
Dodge	2013-2013	2011+ Dodge Challenger	Stage 1 HP TVS Kit	80121-1
Dodge	2013-2013	Challenger RT	Stage 1 HP TVS Kit	80121-1RS
Ford	1964-1966	Mustang Coupe	HP TVS Kit	80040-1
Ford	1967-1970	Mustang Coupe	HP TVS Kit	80041-1
Ford	1997-2003	Ford F150, Lightning, Std Cab, XLT	HP TVS Kit	80304
Ford	2011-2013	2011-2012 Ford Mustang 5.0L. Fits Manual Transmission V8 Only Will Not Fit Boss 302 Shelby GT 500 or cars with roots style superchargers.	Stage 1 HP TVS Kit	80118-2
Ford	2011-2013	Mustang 5.0L	Stage 1 HP TVS Kit	80118-1
GM	1967-1967	A-Body w/ Small Block	HP TVS Kit	80004
GM	1964-1966	A-Body w/ Big Block	HP TVS Kit Extreme	89001
GM	1964-1966	A-Body w/ Small Block	HP TVS Kit Extreme	89004
GM	1964-1966	A-Body w/ Big Block	HP TVS Kit	80001
GM	1964-1966	GM A-Body w/ Small Block	HP TVS Kit Extreme	89002
GM	1968-1970	A-Body w/ Big Block	HP TVS Kit	80005
GM	1968-1970	A-Body w/ Big Block	HP TVS Kit Extreme	89005
GM	1968-1970	A-Body w/ Small Block	HP TVS Kit Extreme	89006
GM	1968-1970	A-Body w/ Small Block	HP TVS Kit	80006
GM	1971-1972	A-Body w/ Small Block	HP TVS Kit Extreme	89008
GM	1971-1972	A-Body w/ Big Block	HP TVS Kit	80007
GM	1971-1972	A-Body w/ Small Block	HP TVS Kit	80008
GM	1971-1972	GM A-Body w/ Big Block	HP TVS Kit Extreme	89007
GM	1978-1988	G-Body w/ Small Block	HP TVS Kit Extreme	89009
GMC	1978-1987	Caballero w/Small Block 1" Drop	Stg 2 HP TVS Kit Extrim	89009-2
Infiniti	2003-2007	G35	Stage 1 HP TVS Kit	80413-1
Lexus	2001-2005	IS300	Stage 1 HP TVS Kit	80410-1
Lexus	2006-2008	IS 250	Stage 1 HP TVS Kit	80438-1
Lexus	2006-2008	IS 350	Stage 1 HP TVS Kit	80438-1
Nissan	2003-2007	350Z	Stage 1 HP TVS Kit	80413-1
Oldsmobile	1967-1967	442 w/ Big Block	HP TVS Kit	80003
Oldsmobile	1967-1967	442 w/ Big Block	HP TVS Kit Extreme	89003

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Oldsmobile	1967-1967	442 w/ Small Block	Stg 2 HP TVS Kit Extrm	89004-2
Oldsmobile	1967-1967	Cutlass w/ Big Block	HP TVS Kit	80003
Oldsmobile	1967-1967	Cutlass w/ Big Block	HP TVS Kit Extreme	89003
Oldsmobile	1967-1967	Cutlass w/ Small Block	Stg 2 HP TVS Kit Extrm	89004-2
Oldsmobile	1964-1966	442 w/ Small Block	HP TVS Kit	80002
Oldsmobile	1964-1966	442 w/ Big Block	Stg 2 HP TVS Kit Extrm	89003-2
Oldsmobile	1964-1966	442, Cutlass w/ Big Block	HP TVS Kit Extreme	89001
Oldsmobile	1964-1966	442, Cutlass w/ Small Block	HP TVS Kit Extreme	89002
Oldsmobile	1964-1966	442, Cutlass w/ Small Block	HP TVS Kit Extreme	89004
Oldsmobile	1964-1966	442, Cutlass w/ Big Block	Stg 2 HP TVS Kit Extrm	89001-2
Oldsmobile	1964-1966	442, Cutlass w/ Small Block	Stg 2 HP TVS Kit Extrm	89002-2
Oldsmobile	1964-1966	Cutlass w/ Small Block	HP TVS Kit	80002
Oldsmobile	1964-1966	GTO, LeMans, Tempest w/ Big Block	Stg 2 HP TVS Kit Extrm	89003-2
Oldsmobile	1968-1970	442, Cutlass w/ Big Block	HP TVS Kit Extreme	89005
Oldsmobile	1968-1970	442, Cutlass w/ Small Block	HP TVS Kit Extreme	89006
Oldsmobile	1968-1970	442, Cutlass w/ Big Block	Stg 2 HP TVS Kit Extrm	89005-2
Oldsmobile	1968-1970	442, Cutlass w/ Small Block	Stg 2 HP TVS Kit Extrm	89006-2
Oldsmobile	1971-1972	442, Cutlass w/ Small Block	HP TVS Kit Extreme	89008
Oldsmobile	1971-1972	442, Cutlass w/ Big Block	HP TVS Kit Extreme	89007
Oldsmobile	1971-1972	442, Cutlass w/ Big Block	Stg 2 HP TVS Kit Extrm	89007-2
Oldsmobile	1971-1972	442, Cutlass w/ Small Block	Stg 2 HP TVS Kit Extrm	89008-2
Oldsmobile	1979-1981	Cutlass w/Small Block 1" Drop	Stg 2 HP TVS Kit Extrm	89009-2
Plymouth	1966-1969	Road Runner	HP TVS Kit	80110
Plymouth	1970-1974	Cuda	HP TVS Kit	80112
Plymouth	1973-1976	Duster, Scamp, Valiant	HP TVS Kit	80114
Pontiac	1967-1967	GTO, LeMans, Tempest w/ Big Block	HP TVS Kit	80003
Pontiac	1967-1967	GTO, LeMans, Tempest w/ Big Block	HP TVS Kit Extreme	89003
Pontiac	1967-1967	GTO, LeMans, Tempest w/ Small Block	Stg 2 HP TVS Kit Extrm	89004-2
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block	HP TVS Kit	80002
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block	HP TVS Kit Extreme	89002

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block	HP TVS Kit Extreme	89004
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Big Block	Stg 2 HP TVS Kit Extrm	89001-2
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block	Stg 2 HP TVS Kit Extrm	89002-2
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Big Block	HP TVS Kit Extreme	89001
Pontiac	1967-1969	Firebird Convertible w/ Bg Blk. Pontiac Motors or Big Blocks w/ Alum Heads use Small Block Application.	Stg 2 HP TVS Kit Extrm	80014-2CV
Pontiac	1967-1969	Firebird Convertible w/ Small Block. Pontiac Big Block Motors should also use this Small Block Application	Stg 2 HP TVS Kit Extrm	80015-2CV
Pontiac	1967-1969	Firebird Convertibles w/ Small Block. Recommended for Small Block Motors & Pontiac BB Motors or Big Blocks with Aluminum Heads.	Stg 2 HP TVS Kit Extrm	80035-2CV
Pontiac	1967-1969	Firebird Coupe w/ Small Block. Pontiac Big Block Motors should also use this Small Block Application	Stg 2 HP TVS Kit Extrm	80015-2
Pontiac	1967-1969	Firebird Coupes w/ Bg Blk. Pontiac Motors w/ Alum Heads use Small Block Application.	Stg 2 HP TVS Kit Extrm	80014-2
Pontiac	1967-1969	Firebird Coupes w/ Small Block. Recommended for Small Block Motors & Pontiac BB Motors or Big Blocks with Aluminum Heads	Stg 2 HP TVS Kit Extrm	80035-2
Pontiac	1967-1969	Firebird w/ Small Block	HP TVS Kit	80035
Pontiac	1967-1969	Firebird w/ 400 should use 80015 Small Block Kit	HP TVS Kit	80014
Pontiac	1967-1969	Firebird with Small Block motors. Pontiac 400 Bg Blk Motors should use this Small Block Application	HP TVS Kit	80015
Pontiac	1968-1970	GTO, LeMans, Tempest w/ Big Block	HP TVS Kit Extreme	89005
Pontiac	1968-1970	GTO, LeMans, Tempest w/ Small Block	HP TVS Kit Extreme	89006
Pontiac	1968-1970	GTO, LeMans, Tempest w/ Big Block	Stg 2 HP TVS Kit Extrm	89005-2
Pontiac	1968-1970	GTO, LeMans, Tempest w/ Small Block	Stg 2 HP TVS Kit Extrm	89006-2

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1970-1973	Firebird Coupes w/ Big Block. Recommended for Big Block Cars and Pontiac 7.5L/455 CI Big Block. Pontiac Motors Under 7.5L/455 CI and Big Blocks with Aluminum Heads Should Use Small Block Application	Stg 2 HP TVS Kit Extrm	80016-2
Pontiac	1970-1973	Firebird Coupes w/ Small Block. Recommended for Small Block Cars Including Pontiac Big Block Motors Under 7.5 L/455 CI	Stg 2 HP TVS Kit Extrm	80017-2
Pontiac	1970-1973	Firebird w/ Small Block	HP TVS Kit	80016
Pontiac	1970-1973	Firebird w/ Small Block	HP TVS Kit	80017
Pontiac	1971-1972	GTO, LeMans, Tempest w/ Big Block	HP TVS Kit Extreme	89007
Pontiac	1971-1972	GTO, LeMans, Tempest w/ Small Block	HP TVS Kit Extreme	89008
Pontiac	1971-1972	GTO, LeMans, Tempest w/ Big Block	Stg 2 HP TVS Kit Extrm	89007-2
Pontiac	1971-1972	GTO, LeMans, Tempest w/ Small Block	Stg 2 HP TVS Kit Extrm	89008-2
Pontiac	1971-1974	Pontiac Ventura w/ Big Block Motor. Cars with Big Block Motor and Aluminum Heads Should Use Small Block Application	HP TVS Kit	80012
Pontiac	1974-1976	Firebird Coupe w/ Small Block	Stg 2 HP TVS Kit Extrm	80034-2
Pontiac	1974-1976	Firebird Coupe w/ Small Block	Stg 2 HP TVS Kit Extrm	80034-27
Pontiac	1974-1976	Firebird w/ Small Block	Stage 1 HP TVS Kit	80033-2
Pontiac	1974-1981	Firebird w/ Big Block	HP TVS Kit	80033
Pontiac	1974-1981	Firebird w/ Small Block	HP TVS Kit	80034
Pontiac	1977-1981	Firebird Coupes w/ Big Block. Recommended for Big Block Cars and Pontiac 7.5L/455 CI Big Block. Pontiac Motors Under 7.5L/455 CI and Big Blocks with Aluminum Heads Should Use Small Block Application.	Stg 2 HP TVS Kit Extrm	80033-27
Pontiac	1978-1981	Lemans w/Small Block 1" Drop	Stg 2 HP TVS Kit Extrm	89009-2
Pontiac	1978-1988	Grand Prix w/Small Block 1" Drop	Stg 2 HP TVS Kit Extrm	89009-2
Pontiac	1982-1992	Firebird w/ Small Block	HP TVS Kit	80018
Pontiac	1982-1992	Firebird w/ Small Block	HP TVS Kit	80019
Pontiac	1993-1997	Firebird w/ Small Block	HP TVS Kit	80021
Pontiac	1993-1997	Firebird w/ Small Block	HP TVS Kit	80022
Pontiac	1993-1997	Firebird w/ Small Block	HP TVS Kit	80024

A-Arms

Hotchkis Tubular A-Arms

Install our Geometry Corrected Tubular Upper and Lower A-Arms on your Muscle Car for dramatically increased handling and control. These TIG-welded bolt-on A-Arms offer premium quality construction for ultimate performance and a great look. Smooth operating Delrin

bushings in the 4130 Chromoly billet cross shafts allow the A-Arms to move through their travel easily. Finished in gloss black powder coat, our precision CNC manufactured A-Arms are ready to install and are complete with premium ball joints. Easy installation with no vehicle modifications required. Only genuine Hotchkis Tubular A-Arms have laser cut logos and are proudly made in the USA.



Lower A-Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1978-1987	Grand National, Regal	Tubular Lower A-Arms	1114L
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Tubular Lower A-Arms	1113L
Chevrolet	1967-1969	Camaro	Tubular Lower A-Arms	1109
Chevrolet	1968-1974	Nova	Tubular Lower A-Arms	1109
Chevrolet	1970-1981	Camaro	Tubular Lower A-Arms	1108
Chevrolet	1975-1979	Nova	Tubular Lower A-Arms	1108
Chevrolet	1978-1983	Malibu	Tubular Lower A-Arms	1114L
Chevrolet	1978-1987	El Camino	Tubular Lower A-Arms	1114L
Chevrolet	1978-1988	Monte Carlo	Tubular Lower A-Arms	1114L
GM	1964-1972	A-Body	Tubular Lower A-Arms	1104
GM	1964-1972	A-Body	Tubular Lower A-Arms	1104-B
GMC	1978-1987	Caballero	Tubular Lower A-Arms	1114L
Oldsmobile	1979-1981	Cutlass	Tubular Lower A-Arms	1114L
Pontiac	1967-1969	Firebird	Tubular Lower A-Arms	1109
Pontiac	1970-1981	Firebird	Tubular Lower A-Arms	1108
Pontiac	1971-1974	Ventura	Tubular Lower A-Arms	1109
Pontiac	1978-1981	LeMans	Tubular Lower A-Arms	1114L
Pontiac	1978-1988	C-10, C1500	Tubular Lower A-Arms	11390L
Pontiac	1978-1988	C15	Tubular Lower A-Arms	11390L
Pontiac	1978-1988	Grand Prix	Tubular Lower A-Arms	1114L



Upper A-Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1978-1987	Grand National, Regal	Tubular Upper A-Arms	1113U
Buick	1978-1987	Grand National, Regal	Tubular Upper A-Arms	1114U
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Tubular Upper A-Arms	1113U
Chevrolet	1970-1981	Camaro	Tubular Upper A-Arms	1106
Chevrolet	1978-1987	El Camino	Tubular Upper A-Arms	1113U
Chevrolet	1978-1988	Chevrolet Monte Carlo, Malibu	Tubular Upper A-Arms	1113U
Dodge	1966-1970	Comet, Super Bee	Tubular Upper A-Arms	1110
Dodge	1966-1972	Charger	Tubular Upper A-Arms	1110
Dodge	1967-1976	Dart	Tubular Upper A-Arms	1112-S
Dodge	1970-1974	Challenger	Tubular Upper A-Arms	1110
Dodge	1971-1972	Demon	Tubular Upper A-Arms	1112-S
GM	1964-1972	A-Body	Tubular Upper A-Arms	1102
GM	1964-1972	Arms do not work with factory spindles! Spindles required are 70-81 GM F-Body or 78-96 GM B-Body.	Tubular Upper A-Arms	1103C
GM	1968-1974	X-Body	Tubular Upper A-Arms	1107
GMC	1978-1987	Caballero	Tubular Upper A-Arms	1113U
Mopar	1967-1976	Does not work with stock 67-72 Small Balljoint spindles. For cars using the small balljoint order part # 1112-S	Tubular Upper A-Arms	1112
Oldsmobile	1979-1981	Cutlass	Tubular Upper A-Arms	1113U
Plymouth	1966-1970	GTX , Satellite	Tubular Upper A-Arms	1110
Plymouth	1966-1971	Road Runner	Tubular Upper A-Arms	1110
Plymouth	1967-1969	Barracuda	Tubular Upper A-Arms	1112-S
Plymouth	1967-1976	Valiant	Tubular Upper A-Arms	1112-S
Plymouth	1970-1974	Cuda	Tubular Upper A-Arms	1110

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Plymouth	1970-1976	Duster	Tubular Upper A-Arms	1112-S
Plymouth	1971-1976	Scamp	Tubular Upper A-Arms	1112-S
Pontiac	1967-1969	F-Body	Tubular Upper A-Arms	1107
Pontiac	1970-1981	Firebird	Tubular Upper A-Arms	1106
Pontiac	1978-1981	LeMans	Tubular Upper A-Arms	1113U
Pontiac	1978-1988	C-10, C1500	Tubular Upper A-Arms	11390U
Pontiac	1978-1988	C15	Tubular Upper A-Arms	11390U
Pontiac	1978-1988	Caballero	Tubular Upper A-Arms	1114U
Pontiac	1978-1988	Cutlass	Tubular Upper A-Arms	1114U
Pontiac	1978-1988	El Camino	Tubular Upper A-Arms	1114U
Pontiac	1978-1988	Grand Prix	Tubular Upper A-Arms	1113U
Pontiac	1978-1988	Grand Prix	Tubular Upper A-Arms	1114U
Pontiac	1978-1988	LeMans	Tubular Upper A-Arms	1114U
Pontiac	1978-1988	Malibu	Tubular Upper A-Arms	1114U
Pontiac	1978-1988	Monte Carlo	Tubular Upper A-Arms	1114U
		Universal	A-Arm Heat Shield	1160



Adjustable Strut Rods

Dramatically improves the cornering performance, traction, and steering response. Designed to be used in conjunction with Hotchkis Sport Suspension A-Arms to reduce bump steer, our Steering Rods improve responsiveness and driver control. They are finished in a lustrous nickel-look powder coated finish blending form and function. Proudly designed, track tested and manufactured in the USA.

Adjustable Strut Rods

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Plymouth	1966-1970	GTX, Satellite	Adj Strut Rods Kit	14366
Plymouth	1966-1970	GTX, Satellite	Adj Strut Rods Kit	16366
Plymouth	1966-1971	Road Runner	Adj Strut Rods Kit	14366
Plymouth	1966-1971	Road Runner	Adj Strut Rods Kit	16366
Plymouth	1967-1969	Barracuda, Vallant	Adj Strut Rods Kit	14385
Plymouth	1970-1974	Cuda	Adj Strut Rods Kit	14366
Plymouth	1970-1974	Cuda	Adj Strut Rods Kit	16366
Plymouth	1971-1976	Scamp	Adj Strut Rods Kit	14385

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1966-1970	Cornet	Adj Strut Rods Kit	16366
Dodge	1966-1970	Cornet, Super Bee	Adj Strut Rods Kit	14366
Dodge	1966-1970	Super Bee	Adj Strut Rods Kit	16366
Dodge	1966-1972	Charger	Adj Strut Rods Kit	16366
Dodge	1966-1972	Charger	Adj Strut Rods Kit	14366
Dodge	1967-1976	Dart	Adj Strut Rods Kit	14385
Dodge	1970-1974	Challenger	Adj Strut Rods Kit	14366
Dodge	1970-1976	Duster	Adj Strut Rods Kit	14385
Dodge	1971-1972	Demon	Adj Strut Rods Kit	14385



Pivot Shaft Kit

The Hotchkis Sport Suspension Pivot Shaft Kit replaces worn out, non-performance, stock lower control arm pivot shafts on your A, B and E-body Mopar. Designed to be direct replacements for stock, these shafts are a greasable design. The grease fittings offer added convenience as well as increased performance by reducing unwanted friction bind. Worn out pivot shafts can create inconsistent handling and are recommended to be replaced, especially when installing new polyurethane bushings. Our Pivot Shaft Kit comes complete with two greasable shafts, polyurethane bushings and grade 8 hardware.

Pivot Shaft Kit

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1966-1970	Cornet, Super Bee,	Pivot Shaft Kit	3006
Dodge	1966-1972	Charger	Pivot Shaft Kit	3006
Dodge	1967-1976	Dart	Pivot Shaft Kit	3005
Dodge	1970-1974	Challenger	Pivot Shaft Kit	3006
Dodge	1970-1976	Duster	Pivot Shaft Kit	3005
Dodge	1971-1972	Demon	Pivot Shaft Kit	3005
Plymouth	1966-1970	GTX, Satellite	Pivot Shaft Kit	3006
Plymouth	1966-1971	Road Runner	Pivot Shaft Kit	3006
Plymouth	1967-1969	Barracuda	Pivot Shaft Kit	3005
Plymouth	1967-1976	Valiant	Pivot Shaft Kit	3005
Plymouth	1970-1974	Cuda	Pivot Shaft Kit	3006
Plymouth	1971-1976	Scamp	Pivot Shaft Kit	3005



#32101



#1113L-AB



#1760

Accessories

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Air Bag Install Kit	1113L-AB
Chevrolet	2010-2012	Camaro	1/2 in. Strut Spacer	38109
GM	1964-1972	A Body Trailing Arm Mount Brackets (1402/3)	Hardware Kit	1707
GM	1964-1972	A-Body Rr Sway Bar (2202R)	Hardware Kit	1704
GM	1964-1972	GM Upper Trailing Arm Bushing Install and Removal Tool	Bushing Removal Tool	32101
GM	1982-1993	F Body	Torque Arm Bushing	1041G
GM	1984-2002	F Body	Torque Arm Bushing	1040G
GM	1984-2002	F Body	Torque Arm Bushing	1043G

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Universal		Rear Air Bag Kit	Air Bag Kit-RED	31750
Universal		14oz Super Grease ideal for use in grease guns to lube the ployurethane bushings	Super Grease 14oz.	3101
Universal		Quick Release Billet Hood Pin Kit from Hotchkis Sport Suspension	Univ. Hood Pin Kit	1760
Universal		12 mm Hardware Pack from Hotchkis Sport Suspension	Hardware Kit	1701
Universal		1/2 in. Hardware Pack	Hardware Kit	1702
Universal		Trailing Arm Hardware Pack for Hotchkis Sport Suspension Part Number 1305	Hardware Kit	1709
Universal		Trailing Arm Hardware Pack for Hotchkis Sport Suspension Part Number 1205.	Hardware Kit	1715
Universal		Black Zerk Fitting Caps	Black Zerk Caps 25pk	1791
Universal		Red Zerk Fitting Caps	Red Zerk Caps 25pk	1790

Battery Trays and Hold Downs

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1972	C10	C-10 Battery Tray	23390
Dodge	1966-1970	Cornet, Super Bee	Battery Hold-Down PI	1761
Dodge	1966-1972	Charger	Battery Hold-Down PI	1761
Dodge	1970-1974	Challenger	Battery Hold-Down PI	1761
MOPAR	1966-1974	MOPAR	B-joint Removal Tool	32102
Plymouth	1966-1970	GTX, Satellite	Battery Hold-Down PI	1761
Plymouth	1966-1971	Road Runner	Battery Hold-Down PI	1761
Plymouth	1970-1974	Cuda	Battery Hold-Down PI	1761



Billet Brackets

Sway Bar Brackets

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	2010-2012	Camaro	Heavy Duty Billet sway Bar Bushing Bracket Kit	22109BB
Chevrolet	2010-2012	Camaro	Heavy Duty Billet sway Bar Bushing Bracket Kit using 22110	22110BB
Infiniti	2009-2013	G37	Billet sway bar bracket upgrade using 22441 sway bars.	22441-BB
Nissan	2009-2013	370Z	Billet sway bar bracket upgrade using 22441 sway bars.	22441-BB

Universal Sway Bar Brackets

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Universal			Billet sway bar bracket 5/8 in. Diameter Bushing	23190625
Universal			Billet sway bar bracket 3/4 in. Diameter Bushing	23190750
Universal			Billet sway bar bracket 1 in. Diameter Bushing	23191000
Universal			Billet sway bar bracket 1 1/16 in. Diameter Bushing	23191063
Universal			Billet sway bar bracket 1 1/8 in. Diameter Bushing	23191125
Universal			Billet sway bar bracket 1 3/16 in. Diameter Bushing	23191188
Universal			Billet sway bar bracket 1.25 in. Diameter Bushing	23191250

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Universal			Billet sway bar bracket 1 5/16 in. Diameter Bushing	23191313
Universal			Billet sway bar bracket 5/8 in. Diameter Bushing	23290625
Universal			Billet sway bar bracket 3/4 in. Diameter Bushing	23290750
Universal			Billet sway bar bracket 13/16 in. Diameter Bushing	23290813
Universal			Billet sway bar bracket 7/8 in. Diameter Bushing	23290875
Universal			Billet sway bar bracket 15/16 in. Diameter Bushing	23290938
Universal			Billet sway bar bracket 1 in. Diameter Bushing	23291000
Universal			Billet sway bar bracket 1 1/16 in. Diameter Bushing	23291063
Universal			Billet sway bar bracket 1 1/8 in. Diameter Bushing	23291125
Universal			Billet sway bar bracket 1.25 in. Diameter Bushing	23291250
Universal			Billet sway bar bracket 1 5/16 in. Diameter Bushing	23291313
Universal			Billet sway bar Bracket Style D 1-1/8	23491125
Universal			Billet sway bar Bracket Style D 1-3/16	23491188
Universal			Billet sway bar Bracket Style D 1-1/4	23491250
Universal			Billet sway bar Bracket Style D 1-3/8	23491375
Universal			Billet sway bar Bracket Style D 1-7/16	23491438
Universal			Billet sway bar Bracket Style D 1-1/2	23491500
Universal			Billet sway bar bracket 13/16 in. Diameter Bushing	23190813
Universal			Billet sway bar bracket 7/8 in. Diameter Bushing	23190875
Universal			Billet sway bar bracket 15/16 in. Diameter Bushing	23190938
Universal			Billet sway bar bracket 1 3/16 in. Diameter Bushing	23291188
Universal			Billet Sway Bar Bracket 1-1/16 in. Diameter Bushing	23391063
Universal			Billet Sway Bar Bracket 1-1/8 in. Diameter Bushing from Hotchkis Sport Suspension	23391125
Universal			Billet sway bar bracket 1-3/16 in. Diameter Bushings	23391188
Universal			Billet sway bar bracket 1.25 in. Diameter Bushings	23391250
Universal			Billet sway bar bracket 1-3/8 in. Diameter Bushings	23391375



Billet Brackets

Camber Plate and Link Kits



Hotchkis Camber Plate Kits help increase the front cornering grip of your car by allowing you to adjust camber and caster for performance and track driving. Our Camber Plates are precision CNC machined from 6061 T6 aluminum and feature a Type 3 hard anodized finish or constructed from zinc plated machined steel for years of durability and performance. Each Camber Plate is loaded with high a quality PTFE lined bearing and is designed for easy service. The plates do not change vehicle ride height and are designed for maximum camber adjustment. Camber plates are a must for any track car or owner looking to gain the extra edge of performance.

Hotchkis Sport Adjustable Camber Links are absolutely necessary to maintain proper rear camber and reduce tire wear on the street and gain cornering grip on the track. Excess negative camber is fast on the track but causes premature inside edge tire wear during prolonged street driving. Our powdercoated steel and machined billet aluminum Camber Links include quiet, greasable polyurethane bushings and a double adjustable design. Proudly designed, track tested and manufactured in the USA.

MAKE	YEAR	MODEL	DESCRIPTION	PART #
BMW	2002-2009	Mini Cooper, Mini Cooper S	Camber Link Kit	13800
BMW	2002-2009	Mini Cooper, Mini Cooper S	Camber Link Kit	13810
BMW	2007-2009	335/335i	Rear Camber Links	12834
BMW	2007-2009	335i, XDrive	Camber Link Kit	12834
BMW	2007-2009	M3	Rear Camber Links	12834
Ford	1979-1993	Mustang	Delta Camber/Caster Plate	3001
Ford	1994-2004	Mustang	Delta Camber/Caster Plate	3002
Ford	1997-2003	F-150 Ext Cab 2wd, Harley Davidson SC 2wd	Cam Kit 97-03 F-150	87385
Ford	1997-2003	F-150 Std Cab 2wd, F-150 Supercrew 2wd	Cam Kit 97-03 F-150	87385
Ford	1997-2005	F-150 Lightning	Cam Kit 97-03 F-150	87385
Scion	2005-2008	Scion TC	Camber Link Kit	12425
Scion	2013-2013	FRS	Camber Plates	30445
Subaru	2013-2013	BRZ	Camber Plates	30445
Toyota	2000-2005	Celica	Camber Link Kit	12700

Chassis Stiffeners and Sub-Frame Connectors

Many cars suffer from chassis flex when driven under intensive cornering load and over uneven surfaces because the chassis lacks sufficient support. Classic Muscle Cars exhibit this issue when driven aggressively on new generation performance radial tires. This unwanted chassis flex makes it more difficult to maintain stability and control. Our fabricated Sub-Frame Connectors and Strut Tower Braces add necessary rigidity and support to your performance car chassis. Specifically, Hotchkis Sub-Frame Connectors are designed

to add rigidity to the chassis to improve vehicle performance by reducing chassis flex while our Strut/Shock Tower Braces tie the strut towers together offering maximum support. Installation of our chassis stiffeners may require minor drilling and welding, but do not require chassis/body modifications or cutting. Our chassis stiffening kits include installation hardware and detailed instructions. Like all Hotchkis Sport Suspension products, they are proudly designed, track tested and manufactured in the USA.



MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1969	Camaro	Subframe Connectors	4007
Chevrolet	1967-1969	Camaro	Subframe Connectors	4008
Chevrolet	1967-1969	Camaro	Fender Braces	2015
Chevrolet	1967-1969	Camaro	Center X-Brace Kit	1404
Chevrolet	1967-1969	Camaro	Handle Bars Front	20101
Chevrolet	1967-1969	Camaro/Firebird Convertible	Chassis Max Kit	81001
Chevrolet	1968-1969	Camaro	Rear Shock Brace	20102
Chevrolet	1968-1974	Nova	Subframe Connectors	4009
Chevrolet	1968-1974	Nova	Handle Bars Front	20101

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1970-1973	Camaro	Subframe Connectors	4012
Chevrolet	1970-1981	Camaro	Fender Braces	2018
Chevrolet	1970-1981	Camaro	Does not fit Pontiac models. Handle Bars Front	20103
Chevrolet	1974-1981	Camaro	Subframe Connectors	4013
Chevrolet	1982-1992	Camaro	Subframe Connectors	4001
Chevrolet	1993-2002	Camaro	Subframe Connectors	4002
Chevrolet	1993-2002	Camaro	Strut Tower Brace	2006R
Chevrolet	2010-2011	Camaro	Front Strut Brace	20109
Chevrolet	2010-2012	Camaro when installing Chassis Max Brace part # 20104	Chassis Brace Spacer	38104
Chevrolet	2010-2013	Camaro	Underbody Brace	20104
Chevrolet	2010-2014	Camaro LT	Underbody Brace	20104
Dodge	1967-1975	Plymouth A-Body (with 108 in. wheelbase)	Subframe Connectors	4014
Dodge	1971-1976	Plymouth A-Body (with 111-inch Wheelbase)	Subframe Connectors	4015
Ford	2005-2011	Mustang	X-Brace	1416
Ford	2005-2012	Mustang	Subframe Connectors	4016
Ford	2005-2012	Mustang. Designed to clear stock intake manifold on 2005-2010 4.6L and 2011-2012 5.0L. Some aftermarket manifolds may interfere. May not clear intake manifold on GT500 Models.	Strut Tower Brace	2016
GM	1993-1997	F-Body	Strut Tower Brace	2003
GM	1993-2000	F-Body	Strut Tower Brace	2003R
GM	1998-2002	F-Body LS1	Strut Tower Brace	2006
GM	1998-2002	F-Body V6	Strut Tower Brace	2006
Mopar	1966-1970	B-Body	Subframe Connectors	4010
Pontiac	1967-1969	Firebird	Subframe Connectors	4007
Pontiac	1967-1969	Firebird	Subframe Connectors	4008
Pontiac	1967-1969	Firebird	Fender Braces	2015
Pontiac	1967-1969	Firebird Convertible	Center X-Brace Kit	1404
Pontiac	1968-1969	Firebird	Rear Shock Brace	20102
Pontiac	1970-1973	Firebird	Subframe Connectors	4012
Pontiac	1970-1981	Firebird	Fender Braces	2018
Pontiac	1974-1981	Firebird	Subframe Connectors	4013
Pontiac	1982-1992	Firebird	Subframe Connectors	4001
Pontiac	1993-2002	Firebird	Subframe Connectors	4002
Pontiac	1993-2002	Firebird	Strut Tower Brace	2006R
Plymouth	1970-1974	Baracuda	Subframe Connectors	4011S
Scion	2013-2013	Scion FRS	Front Strut Brace	20445

Hotchkis Tuned Shocks

Hotchkis Tuned 1.5 Street Performance Series Shock Absorbers by Fox

The Hotchkis Tuned 1.5 Street Performance Series shock absorbers by Fox are specifically tuned by Hotchkis Performance ride engineers for a smooth ride and exceptional control to your Classics Muscle Car. Our unique 1.5 Series Street Performance Series Shock Absorbers feature the latest cutting edge mono tube technology packaged in a lightweight smooth-bore Type III hard anodized aluminum body. Our Performance Shocks feature smooth riding digressive disc technology, a high-flow piston, specially formulated oil and high pressure nitrogen for consistent performance under extreme driving conditions. Each Hotchkis

Shock is application tuned and street/track tested to offer superior ride comfort as well as vehicle control. For excellent durability our 1.5 SPS Performance Shock features a 1/2" hard chrome plated heat treated alloy shaft subjected to 100 hour salt spray testing. To prevent contaminants from entering the shock, the rod guide employs a wiper/scrapper dual seal which cleans the shaft before reaching the main seal. Therefore a shock boot is not necessary. End caps are black anodized 6061-T6 billet aluminum and feature polyurethane bushings. CNC machined cross bars and vehicle specific mounting hardware makes our Hotchkis Shocks by Fox a direct replacement for stock Classic Muscle Car shocks*. Bolt a pair of Hotchkis Tuned 1.5 Street Performance Series shock absorbers today and feel the dramatic difference.

*Hotchkis Shocks are for lowered Classic Mopars only. Will not work at stock ride height.




MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Skylark	HPS 1000 Shock 4 Pack	79010002
Buick	1978-1987	Buick Grand National, Regal	HPS 1000 Shock 4 Pack	79010001
Buick	1978-1988	Grand National	Hotchkis/Fox Shock 4 Pack	79020001
Buick	1978-1988	Grand National, Regal	1.5 SPS Front Shock	70020001
Buick	1978-1988	Grand National, Regal	1.5 SPS Rear Shock	71020009
Buick	1978-1988	Regal	Hotchkis/Fox Shock 4 Pack	79020001
Chevrolet	1964-1972	Chevelle, El Camino	1.5 SPS Front Shock	70020012
Chevrolet	1964-1972	Chevelle, El Camino, Monte Carlo	1.5 SPS Front Shock	70020016
Chevrolet	1964-1972	El Camino, Malibu, Chevelle	Hotchkis/Fox Shock 4 Pack	79020002

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo	HPS 1000 Shock 4 Pack	79010002
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo, Chevelle	1.5 SPS Rear Shock	71020009
Chevrolet	1964-1972	Monte Carlo	1.5 SPS Front Shock	70020012
Chevrolet	1967-1969	Camaro	1.5 SPS Rear Shock	71020012
Chevrolet	1967-1969	Camaro	HPS 1000 Rear Shock	71010012
Chevrolet	1967-1969	Camaro	Hotchkis/Fox Shock 4 Pack	79020003
Chevrolet	1967-1969	Camaro	HPS 1000 Shock 4 Pack	79010003
Chevrolet	1967-1969	Camaro	1.5 SPS Front Shock	70020012
Chevrolet	1967-1969	Camaro	1.5 SPS Front Shock	70020016
Chevrolet	1968-1974	Nova	1.5 SPS Rear Shock	71020011
Chevrolet	1968-1974	Nova	HPS 1000 Rear Shock	71010011
Chevrolet	1968-1974	Nova	Hotchkis/Fox Shock 4 Pack	79020011
Chevrolet	1968-1974	Nova	HPS 1000 Shock 4 Pack	79010011
Chevrolet	1970-1976	Camaro	HPS 1000 Shock 4 Pack	79010004
Chevrolet	1970-1981	Camaro	1.5 SPS Front Shock	70020012
Chevrolet	1970-1981	Camaro	1.5 SPS Front Shock	70020016
Chevrolet	1970-1981	Camaro	1.5 SPS Rear Shock	71020014
Chevrolet	1970-1981	Camaro	HPS 1000 Rear Shock	71010014
Chevrolet	1970-1981	Camaro	Hotchkis/Fox Shock 4 Pack	79020004
Chevrolet	1977-1981	Camaro	HPS 1000 Shock 4 Pack	79010005
Chevrolet	1977-1985	Caprice, Impala	HPS 1000 Shock 4 Pack	79010006
Chevrolet	1978-1983	Malibu	HPS 1000 Shock 4 Pack	79010001
Chevrolet	1978-1987	El Camino	HPS 1000 Shock 4 Pack	79010001
Chevrolet	1978-1988	El Camino, Monte Carlo	1.5 SPS Front Shock	70020001
Chevrolet	1978-1988	El Camino, Monte Carlo	Hotchkis/Fox Shock 4 Pack	79020001
Chevrolet	1978-1988	El Camino, Monte Carlo	1.5 SPS Rear Shock	71020009
Chevrolet	1978-1988	Monte Carlo	HPS 1000 Shock 4 Pack	79010001
Chevrolet	1978-1996	Caprice, Impala	1.5 SPS Front Shock	70020009
Chevrolet	1991-1996	Caprice, Impala	HPS 1000 Shock 4 Pack	79010006
Dodge	1963-1976	Dart	1.5 SPS Front Shock	70020013
Dodge	1963-1976	Dart	Hotchkis/Fox Shock 4 Pack	79020015
Dodge	1963-1976	Dodge Dart	1.5 SPS Rear Shock	71020015
Dodge	1970-1974	Challenger	1.5 SPS Front Shock	70020013
Dodge	1970-1974	Challenger	1.5 SPS Rear Shock	71020015

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1970-1974	Challenger	Hotchkis/Fox Shock 4 Pack	79020015
Ford	1964-1966	Mustang Coupe, Fastback and Convertible	1.5 SPS Front Shock	70020016
Ford	1967-1970	Mustang Coupe, Fastback and Convertible	1.5 SPS Front Shock	70020017
Ford	1964-1970	Mustang Coupe, Fastback and Convertible	1.5 SPS Rear Shock	71020016
Ford	1964-1966	Mustang Coupe, Fastback and Convertible	Hotchkis/Fox Shock 4 Pack	79020016
Ford	1964-1972	Mustang Coupe, Fastback and Convertible	Hotchkis/Fox Shock 4 Pack	79020017
Ford	1967-1970	Ford Mustang Coupe, Fastback and Convertible	1.5 SPS Front Shock	70020017
Ford	1997-2003	F150	HPS 1000 Front Shock	70010033
Ford	1997-2003	F150	HPS 1000 Rear Shock	71010033
GM	1964-1972	1964-1972 GM A-Body	1.5 SPS Front Shock	70020012
GM	1964-1972	A Body	Hotchkis/Fox Shock 4 Pack	79020002
GM	1964-1972	A-Body	1.5 SPS Rear Shock	71020009
GM	1977-1981	F-body	HPS 1000 Front Shock	70010009
GM	1978-1988	G Body	1.5 SPS Front Shock	70020001
GM	1978-1988	G Body	1.5 SPS Rear Shock	71020009
GM	1978-1988	G Body	Hotchkis/Fox Shock 4 Pack	79020001
GM	1978-1988	G-Body	HPS 1000 Front Shock	70010001
GM	1978-1996	B-Body	HPS 1000 Front Shock	70010009
GM	1964-1972	A Body	HPS 1000 Rear Shock	71010009
GM	1964-1972	A, B, F, X Body	HPS 1000 Front Shock	70010012
GM	1964-1972	B Body	HPS 1000 Rear Shock	71010009
GM	1978-1988	G Body	HPS 1000 Rear Shock	71010009
GMC	1963-1972	C10 Designed to work on truck lowered between 2 & 4 inches using springs	1.5 SPS Rear Shock	71390
GMC	1963-1972	Kit includes two front shocks, and two relocator brackets	1.5 SPS Front Shock	70390
GMC	1978-1987	Caballero	HPS 1000 Shock 4 Pack	79010001
Oldsmobile	1964-1972	442, Cutlass	HPS 1000 Shock 4 Pack	79010002
Oldsmobile	1979-1981	Oldsmobile Cutlass	HPS 1000 Shock 4 Pack	79010001
Plymouth	1966-1972	Roadrunner	1.5 SPS Rear Shock	71020013
Plymouth	1966-1972	Roadrunner	Hotchkis/Fox Shock 4 Pack	79020013
Plymouth	1966-1972	Roadrunner	1.5 SPS Front Shock	70020013
Plymouth	1970-1974	Baracuda	1.5 SPS Rear Shock	71020013
Plymouth	1970-1974	Baracuda	Hotchkis/Fox Shock 4 Pack	79020013

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1964-1972	GTO, LeMans	Hotchkis/Fox Shock 4 Pack	79020002
Pontiac	1964-1972	GTO, LeMans	1.5 SPS Front Shock	70020012
Pontiac	1964-1972	GTO, LeMans	1.5 SPS Rear Shock	71020009
Pontiac	1964-1972	GTO, LeMans	HPS 1000 Shock 4 Pack	79010002
Pontiac	1967-1969	Firebird	1.5 SPS Front Shock	70020012
Pontiac	1967-1969	Firebird	1.5 SPS Rear Shock	71020012
Pontiac	1967-1969	Firebird	HPS 1000 Rear Shock	71010012
Pontiac	1967-1969	Firebird	Hotchkis/Fox Shock 4 Pack	79020003
Pontiac	1967-1969	Firebird	HPS 1000 Shock 4 Pack	79010003
Pontiac	1970-1976	Firebird	HPS 1000 Shock 4 Pack	79010004
Pontiac	1970-1981	Firebird	1.5 SPS Front Shock	70020012
Pontiac	1970-1981	Firebird	1.5 SPS Front Shock	70020016
Pontiac	1970-1981	Firebird	1.5 SPS Rear Shock	71020014
Pontiac	1970-1981	Firebird	HPS 1000 Rear Shock	71010014
Pontiac	1970-1981	Firebird	HPS 1000 Shock 4 Pack	79010005
Pontiac	1970-1981	Firebird	Hotchkis/Fox Shock 4 Pack	79020004
Pontiac	1971-1974	Ventura	HPS 1000 Shock 4 Pack	79010011
Pontiac	1978-1981	Pontiac LeMans	HPS 1000 Shock 4 Pack	79010001
Pontiac	1978-1988	Grand Prix	HPS 1000 Shock 4 Pack	79010001

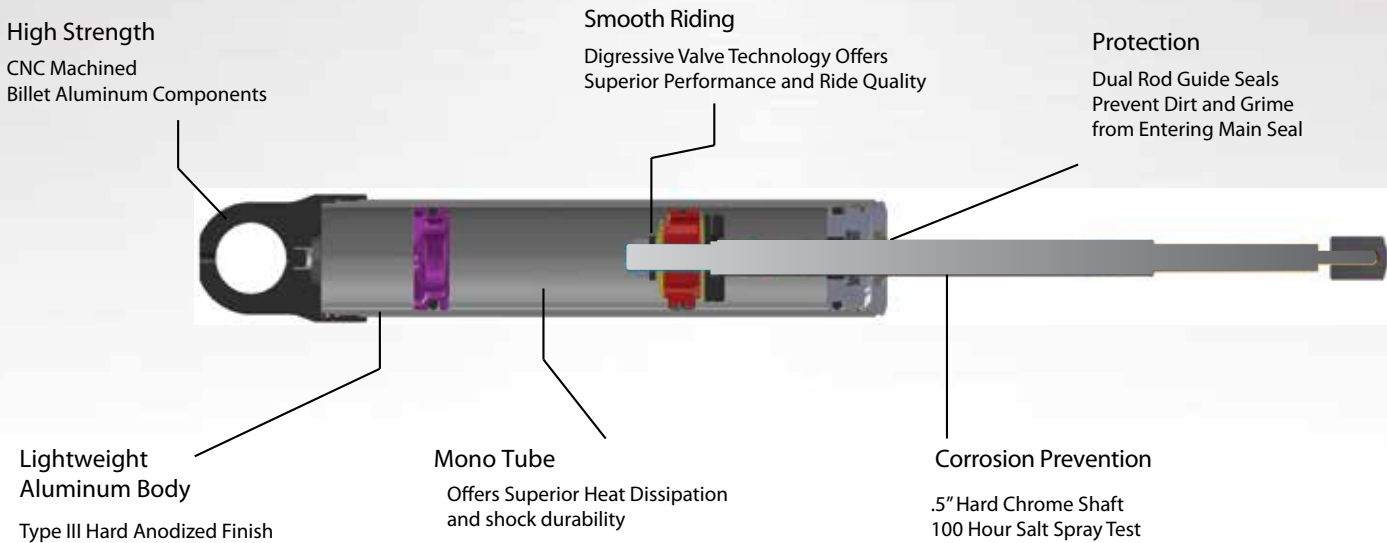

Performance Springs

Sport Coil Springs

Improve handling and the appearance with a set of Hotchkis Sport Suspension Coil Springs. Our Sport Coil Springs provide an aggressive stance and dramatically improve your cars cornering and stability through increased spring rates and lower center of gravity. Our engineers poured over computer modeling and track testing data to create the ultimate coil springs that improve handling while offering a sport yet comfortable ride. Hotchkis Performance Coil Springs are developed as a complete front and rear balanced system especially when combined with our Sport Sway Bars. Each premium gray powder coated coil spring is precision wound using the highest quality steel and are proudly made in the USA.



Sport Rear Leaf Springs

Dramatically improve your Classic Muscle Car's cornering performance, traction and overall driving enjoyment with Hotchkis Sport Suspension Sport Leaf Springs. Featuring polyurethane rear bushings and rubber front bushings our Sport Leaf Springs offer both performance and ride comfort. The lowered design reduces your vehicle's center of gravity and improves overall appearance. Our Sport leaf Spring package also includes Grade-8 Hardware, Polyurethane and Rubber Bushings. Bolt a set on today and feel the performance gain.

Sport Torsion Bar Kits

Our Forged Torsion Bars for Classic Mopars Improve handling performance and vehicle control while maintaining a comfortable ride. They are engineered with an increased spring rate and lower the car for an improved look plus vastly improved handling. The kits include our exclusive gloss black powdercoated Sport Torsion Bars, polyurethane seals and new retaining clips.



MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1966	A-Body w/ Big Block 1" Drop	Coil Springs Set	1917
Buick	1964-1966	Skylark w/ Small Block 2" Drop	Coil Springs Set	19112
Buick	1964-1966	Skylark w/ Big Block 2" Drop	Coil Springs Set	19113
Buick	1964-1966	Skylark w/ Small Block 2" Drop	Coil Springs Front	19112F
Buick	1964-1966	Skylark w/ Big Block 2" Drop	Coil Springs Front	19113F
Buick	1964-1966	Skylark w/ Small Block 2" Drop	Coil Springs Rear	19112R
Buick	1964-1966	Skylark w/ Big Block 2" Drop	Coil Springs Rear	19113R
Buick	1964-1966	Skylark w/ Big Block 2" Drop	Coil Springs Front	19115F
Buick	1967-1972	Skylark w/ Small Block 2" Drop	Coil Springs Set	19114
Buick	1967-1972	Skylark w/ Big Block 2" Drop	Coil Springs Set	19115
Buick	1967-1972	Skylark w/ Small Block 2" Drop	Coil Springs Front	19114F
Buick	1967-1972	Skylark w/ Big Block 2" Drop	Coil Springs Rear	19115R
Buick	1967-1972	Skylark w/ Big Block 1" Drop	Coil Springs Set	1916
Buick	1967-1988	Grand National, Regal w/ Small Block 2" Drop	Coil Springs Rear	19114R
Buick	1967-1988	Regal, Skylark w/ Small Block 2" Drop	Coil Springs Rear	19114R
Chevrolet	1963-1972	C-10 w/ Small Block 4" and 6" Drop	Coil Springs Set	19390
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Small Block 2" Drop	Coil Springs Set	19112
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block 2" Drop	Coil Springs Set	19113
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Small Block 2" Drop	Coil Springs Front	19112F
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block 2" Drop	Coil Springs Front	19113F
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block 2" Drop	Coil Springs Front	19115F
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Small Block 2" Drop	Coil Springs Rear	19112R
Chevrolet	1964-1966	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block 2" Drop	Coil Springs Rear	19113R
Chevrolet	1967-1969	Camaro w/ Big Block 2" Drop	Coil Springs Front	1906F
Chevrolet	1967-1969	Camaro w/ Small Block 2" Drop	Coil Springs Front	1907F
Chevrolet	1967-1969	Camaro w/ 1.5" Drop	Perf Leaf Springs	2407C
Chevrolet	1967-1969	Camaro w/ 3" Drop	Perf Leaf Springs	2413C
Chevrolet	1967-1972	2wd C-10 pickups. Front spring offers 2" drop on big block Trucks 1.875" on small block trucks.	Frnt Coil Spring Set	19392F
Chevrolet	1967-1972	2wd C-10 pickups. Front spring offers 2" drop on big block Trucks 1.875" on small block trucks.	Coil Springs Set	19392

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1972	C-10 Pickup w/ Small Block 4" Drop	Front Springs	19390F
Chevrolet	1967-1972	C-10 Pickup w/ Small Block 6" Drop	Coil Springs Rear	19390R
Chevrolet	1967-1972	El Camino, Malibu, Monte Carlo w/ Big Block 1" Drop	Coil Springs Set	1916
Chevrolet	1967-1972	El Camino, Malibu, Monte Carlo, Chevelle w/ Small Block 2" Drop	Coil Springs Set	19114
Chevrolet	1967-1972	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block 2" Drop	Coil Springs Set	19115
Chevrolet	1967-1972	El Camino, Malibu, Monte Carlo, Chevelle w/ Small Block 2" Drop	Coil Springs Front	19114F
Chevrolet	1967-1972	El Camino, Malibu, Monte Carlo, Chevelle w/ Big Block 2" Drop	Coil Springs Rear	19115R
Chevrolet	1967-1981	Camaro	Spring Bushing Kit	21016
Chevrolet	1967-1988	El Camino, Malibu, Monte Carlo, Chevelle w/ Small Block 2" Drop	Coil Springs Rear	19114R
Chevrolet	1968-1974	Nova w/ Big Block 2" Drop	Coil Springs Front	1906F
Chevrolet	1968-1974	Nova w/ Small Block 2" Drop	Coil Springs Front	1907F
Chevrolet	1968-1974	Nova w/ 1.5" Drop	Perf Leaf Springs	2407C
Chevrolet	1968-1974	Nova w/ 3" Drop	Perf Leaf Springs	2413C
Chevrolet	1968-1974	Nova	Spring Bushing Kit	21016
Chevrolet	1970-1981	Camaro w/ Small Block 2" Drop	Coil Springs Front	1908F
Chevrolet	1970-1981	Camaro w/ Big Block 2" Drop	Coil Springs Front	1909F
Chevrolet	1970-1981	Camaro w/ 1.5" Drop	Perf Leaf Springs	2408C
Chevrolet	1975-1979	Nova w/ Small Block 2" Drop	Coil Springs Front	1908F
Chevrolet	1975-1979	Nova w/ Big Block 2" Drop	Coil Springs Front	1909F
Chevrolet	1975-1979	Nova w/ 1.5" Drop	Perf Leaf Springs	2408C
Chevrolet	1982-1992	Camaro	Coil Springs Front	1903F
Chevrolet	1982-1992	Camaro	Coil Springs Rear	1903R
Chevrolet	1982-1992	Camaro	Coil Springs Set	1903
Chevrolet	1993-1997	Camaro	Coil Springs Set	1904
Chevrolet	1994-1996	Impala Sport, Impala SS	Coil Springs Set	1922
Chevrolet	1998-2002	Camaro	Coil Springs Set	1905
Chevrolet	2010-2011	Camaro w/ 1" Drop. Not for convertibles due to added weight of car.	Coil Springs Set	19110
Chrysler	2005-2009	300C SRT8	Coil Springs Set	19105
Chrysler	2005-2009	300C, Magnum	Coil Springs Set	19101
Chrysler	2006-2009	Charger SRT8	Coil Springs Set	19105
Dodge	1970-1070	Charger, Coronet, Super Bee	Shackle Kit	17367

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	2012-2013	Charger. On models with self leveling shocks lowering springs cannot be used without changing the struts. We offer Bilstein Shock replacements as well as a spring kit with shocks included.	Coil Springs Set	19111
Dodge	1966-1969	Charger, Coronet, Super Bee	Shackle Kit	17367
Dodge	1966-1969	Dodge Charger, Coronet, Super Bee	Torsion Bar Kit	19367
Dodge	1966-1970	Coronet, Super Bee	Leaf Spring Shim Kit	3003
Dodge	1966-1972	Charger	Leaf Spring Shim Kit	3003
Dodge	1966-1972	B-Body	Torsion Bar Kit	19367
Dodge	1967-1976	A-Body	Perf Leaf Springs	24385
Dodge	1967-1976	Dart	Torsion Bar Kit	19385
Dodge	1970-1974	Challenger	Leaf Spring Shim Kit	3003
Dodge	1970-1974	Challenger	Shackle Kit	17367
Dodge	1971-1972	Charger	Shackle Kit	17367
Dodge	1971-1972	Demon	Torsion Bar Kit	19385
Dodge	1973-1976	Dart Sport	Torsion Bar Kit	19385
Dodge	2004-2007	Magnum 2wd Hemi	Coil Springs Set	19101
Dodge	2006-2009	Charger	Coil Springs Set	19104
Dodge	2008-2010	Challenger. For cars equipped with self leveling Nivomat suspension lowering springs cannot be used without changing the struts.	Coil Springs Set	19107
Dodge	2009-2010	Challenger RT. For cars equipped with self leveling Nivomat suspension lowering springs cannot be used without changing the struts.	Coil Springs Set	19108
Dodge	2011 plus	Charger RT. Shocks are included to replace OE units on vehicles equipped with self leveling rear shocks.	Coil Springs Set	19111-RS
Dodge	2011-2012	Challenger RT - If your model has self leveling rear suspension order kit 19120-RS to lower the vehicle.	Coil Springs Set	19120
Dodge	2013-2013	Challenger R/T V6	Coil Springs Set	19121

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	2013-2013	Challenger RT - Shocks are included to replace OE units on vehicles equipped with self leveling rear shocks.	Coil Spring Shck Set	19121-RS
Dodge	2011-2012	Challenger RT - Shocks are included to replace OE units on vehicles equipped with self leveling rear shocks.	Coil Springs Set	19120-RS
Ford	1967-1970	Ford Mustang Coupe Fastback and Convertible	Coil Springs Front	1930
Ford	1964-1966	Ford Mustang Coupe Fastback and Convertible	Perf Leaf Springs	2430
Ford	1967-1970	Ford Mustang Coupe Fastback and Convertible	Perf Leaf Springs	2431
Ford	1997-2003	F150 Std Cab	Perf Leaf Springs	2412
Ford	1997-2004	F-150 Standard Cab 2wd	Coil Springs Front	1939F
Ford	1997-2005	F-150 Lightning 2wd	Coil Springs Front	1939F
Ford	2011-2012	Mustang 5.0L	Coil Springs Set	19391
GM	1964-1966	A-Body w/ Small Block 1" Drop	Coil Springs Set	1900
GM	1964-1966	A-Body W/ 1" Drop	Coil Springs Rear	1900R
GM	1964-1966	A-Body w/ Big Block 1" Drop	Coil Springs Set	1917
GM	1964-1972	A-Body w/ Small Block 1" Drop	Coil Springs Front	1901F
GM	1964-1972	A-Body w/ Big Block 1" Drop	Coil Springs Front	1916F
GM	1967-1969	F-Body w/ Small Block 3" Drop	Coil Springs Front	1937F
GM	1967-1972	A-Body w/ Small Block 1" Drop	Coil Springs Set	1901
GM	1967-1988	A Body w/ 1" Drop	Coil Springs Rear	1901R
GM	1967-1988	G Body w/ 1" Drop	Coil Springs Rear	1901R
GM	1968-1974	X Body w/ Small Block 3" Drop	Coil Springs Front	1937F
GM	1978-1987	F Body w/ Small Block 1" Drop	Coil Springs Front	1902F
GM	1978-1987	G Body w/ Small Block 1" Drop	Coil Springs Front	1902F
GM	1978-1988	G-Body w/ Small Block 1" Drop	Coil Springs Set	1902
GMC	1967-1972	C-10 pickups. Front spring offers 2" drop on big block Trucks 1.875" on small block trucks.	Frnt Coil Spring Set	19392F
GMC	1967-1972	C-10 pickups. Front spring offers 2" drop on big block Trucks 1.875" on small block trucks.	Coil Springs Set	19392

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Infiniti	2003-2007	G35	Coil Springs Set	19413
Lexus	2006-2008	IS 250, IS 350	Coil Springs Set	19438
Mopar	1967-1970	B Body	Perf Leaf Springs	24366
Mopar	1970-1974	E Body	Perf Leaf Springs	24367
Nissan	2003-2007	350Z	Coil Springs Set	19413
Oldsmobile	1964-1966	442, Cutlass w/ Small Block 2" Drop	Coil Springs Set	19112
Oldsmobile	1964-1966	442, Cutlass w/ Big Block 2" Drop	Coil Springs Set	19113
Oldsmobile	1964-1966	442, Cutlass w/ Small Block 2" Drop	Coil Springs Front	19112F
Oldsmobile	1964-1966	442, Cutlass w/ Big Block 2" Drop	Coil Springs Front	19113F
Oldsmobile	1964-1966	442, Cutlass w/ Big Block 2" Drop	Coil Springs Front	19115F
Oldsmobile	1964-1966	442, Cutlass w/ Small Block 2" Drop	Coil Springs Rear	19112R
Oldsmobile	1964-1966	442, Cutlass w/ Big Block 2" Drop	Coil Springs Rear	19113R
Oldsmobile	1967-1972	442, Cutlass w/ Small Block 2" Drop	Coil Springs Set	19114
Oldsmobile	1967-1972	442, Cutlass w/ Big Block 2" Drop	Coil Springs Set	19115
Oldsmobile	1967-1972	442, Cutlass w/ Small Block 2" Drop	Coil Springs Front	19114F
Oldsmobile	1967-1972	442, Cutlass w/ Big Block 2" Drop	Coil Springs Rear	19115R
Oldsmobile	1967-1972	442, Cutlass w/ Big Block 1" Drop	Coil Springs Set	1916
Oldsmobile	1967-1988	442, Cutlass w/ Small Block 2" Drop	Coil Springs Rear	19114R
Plymouth	1970-1970	GTX, Roadrunner, Satellite	Shackle Kit	17367
Plymouth	1966-1969	GTX, Roadrunner, Satellite	Shackle Kit	17367
Plymouth	1966-1969	Plymouth GTX, Roadrunner, Satellite	Torsion Bar Kit	19367
Plymouth	1966-1970	GTX, Satellite	Leaf Spring Shim Kit	3003
Plymouth	1966-1971	Road Runner	Leaf Spring Shim Kit	3003
Plymouth	1967-1969	Barracuda	Torsion Bar Kit	19385
Plymouth	1967-1976	Valiant	Torsion Bar Kit	19385
Plymouth	1970-1974	Cuda	Leaf Spring Shim Kit	3003
Plymouth	1970-1974	Cuda	Shackle Kit	17367
Plymouth	1970-1976	Duster	Torsion Bar Kit	19385
Plymouth	1971-1976	Scamp	Torsion Bar Kit	19385
Pontiac	1964-1966	A-Body w/ Big Block 1" Drop	Coil Springs Set	1917
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Big Block 2" Drop	Coil Springs Set	19113

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block 2" Drop	Coil Springs Front	19112F
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Big Block 2" Drop	Coil Springs Front	19113F
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Big Block 2" Drop	Coil Springs Front	19115F
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block 2" Drop	Coil Springs Rear	19112R
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Big Block 2" Drop	Coil Springs Rear	19113R
Pontiac	1964-1966	GTO, LeMans, Tempest w/ Small Block 2" Drop	Coil Springs Set	19112
Pontiac	1967-1969	Firebird w/ Big Block 2" Drop	Coil Springs Front	1906F
Pontiac	1967-1969	Firebird w/ Small Block 2" Drop	Coil Springs Front	1907F
Pontiac	1967-1969	Firebird w/ 3" Drop	Perf Leaf Springs	2413C
Pontiac	1967-1972	GTO, LeMans, Tempest w/ Small Block 2" Drop	Coil Springs Set	19114
Pontiac	1967-1972	GTO, LeMans, Tempest w/ Big Block 2" Drop	Coil Springs Set	19115
Pontiac	1967-1972	GTO, LeMans, Tempest w/ Small Block 2" Drop	Coil Springs Front	19114F
Pontiac	1967-1972	GTO, LeMans, Tempest w/ Big Block 2" Drop	Coil Springs Rear	19115R
Pontiac	1967-1972	GTO, LeMans, Tempest w/ Big Block 1" Drop	Coil Springs Set	1916
Pontiac	1967-1981	Firebird	Spring Bushing Kit	21016
Pontiac	1967-1988	GTO, LeMans, Tempest w/ Small Block 2" Drop	Coil Springs Rear	19114R
Pontiac	1970-1973	Firebird w/ 1.5" Drop	Perf Leaf Springs	2408C
Pontiac	1970-1981	Firebird w/ Small Block 2" Drop	Coil Springs Front	1908F
Pontiac	1970-1981	Firebird w/ Big Block 2" Drop	Coil Springs Front	1909F
Pontiac	1971-1974	Ventura w/ Big Block 2" Drop	Coil Springs Front	1906F
Pontiac	1971-1974	Ventura w/ Small Block 2" Drop	Coil Springs Front	1907F
Pontiac	1974-1981	Firebird	Perf Leaf Springs	2409C
Pontiac	1982-1992	Firebird	Coil Springs Front	1903F
Pontiac	1982-1992	Firebird	Coil Springs Rear	1903R
Pontiac	1982-1992	Firebird	Coil Springs Set	1903
Pontiac	1993-1997	Firebird	Coil Springs Set	1904
Pontiac	1998-2002	Firebird	Coil Springs Set	1905
Subaru	2013-2013	Subaru BRZ	Coil Springs Set	19445
Scion	2004-2007	Scion xB	Coil Springs Set	19412
Scion	2013-2013	Scion FRS	Coil Springs Set	19445
Toyota	2000-2005	Celica	Coil Springs Set	19400

Anti-Squat Kits

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1963-1972	C-10	Anti Squat Kit	30390
GMC	1963-1972	C-10	Anti Squat Kit	30390

Panhard Rods

Hotchkis Sport Suspension Panhard Rods improve handling and traction by upgrading your car's flimsy stock Panhard Rod to our adjustable heavy duty model. Panhard Rods positively locate the rear axle and control lateral side-to-side movement. Our adjustable Panhard rod features greasable bushings, TIG-welded construction and a durable black powder coated finish. Proudly designed, track tested and manufactured in the USA.



Panhard Rods

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Panhard Rod	1513
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Panhard Rod	1514
Chevrolet	1982-2002	Camaro	Panhard Rod	1501
Chevrolet	1982-2002	Camaro	Red Panhard Rod	1501R
Ford	2005-2012	Mustang	Panhard Rod	15102
Pontiac	1982-2002	Firebird	Panhard Rod	1501
Pontiac	1982-2002	Firebird	Red Panhard Rod	1501R

Towing Packages

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	2000-2006	Avalanche, Suburban	Towing Package	1817
GM	2000-2006	SUV	Towing Package	1816
GMC	2000-2006	Yukon, Yukon XL	Towing Package	1817

Upper Trailing Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1967	Skylark	Upper Trailing Arms	1203AA
Buick	1964-1967	Skylark	Upper Trailing Arms	1203
Buick	1968-1972	Skylark	Upper Trailing Arms	1202AA
Buick	1968-1972	Skylark	Upper Trailing Arms	1202
Buick	1973-1977	Regal	Upper Trailing Arms	1206AA
Buick	1973-1977	Regal	Upper Trailing Arms	1206
Buick	1978-1996	Roadmaster Sedan, Roadmaster wagon	Upper Trailing Arms	1205
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Upper Trailing Arm	1213
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Upper Trailing Arm	1214
Chevrolet	1967-1970	Bel Air, Biscayne, Caprice, Impala	Upper Trailing Arm	1215
Chevrolet	1964-1967	Monte Carlo, Chevelle, El Camino, Malibu	Upper Trailing Arms	1203AA
Chevrolet	1964-1967	Monte Carlo, Chevelle, El Camino, Malibu	Upper Trailing Arms	1203
Chevrolet	1968-1972	Monte Carlo, Chevelle, El Camino, Malibu	Upper Trailing Arms	1202AA
Chevrolet	1968-1972	Monte Carlo, Chevelle, El Camino, Malibu	Upper Trailing Arms	1202
Chevrolet	1973-1977	Monte Carlo, Chevelle, El Camino, Malibu	Upper Trailing Arms	1206AA
Chevrolet	1973-1977	Monte Carlo, Chevelle, El Camino, Malibu	Upper Trailing Arms	1206
Chevrolet	1978-1988	A/G Body	Upper Trailing Arms	1201AA
Chevrolet	1978-1988	A/G Body	Upper Trailing Arms	1201
Chevrolet	1978-1996	Caprice, Impala, Impala SS	Upper Trailing Arms	1205
Ford	1979-2004	Mustang	Upper Trailing Arms	1204AA
Ford	1979-2004	Mustang	Upper Trailing Arms	1204
Ford	1979-2004	Mustang	Upper Trailing Arms	1204R
Ford	2011-2012	Mustang	Upper Trailing Arm	1216
Oldsmobile	1964-1967	442 , Cutlass	Upper Trailing Arms	1203AA
Oldsmobile	1964-1967	442 , Cutlass	Upper Trailing Arms	1203
Oldsmobile	1968-1972	442 , Cutlass	Upper Trailing Arms	1202
Oldsmobile	1968-1972	442, Cutlass	Upper Trailing Arms	1202AA
Oldsmobile	1973-1977	Cutlass	Upper Trailing Arms	1206AA
Oldsmobile	1973-1977	Cutlass	Upper Trailing Arms	1206

Upper Trailing Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1964-1967	GTO, Le Mans, Tempest	Upper Trailing Arms	1203AA
Pontiac	1964-1967	GTO, Le Mans, Tempest	Upper Trailing Arms	1203
Pontiac	1968-1972	GTO, Le Mans, Tempest	Upper Trailing Arms	1202AA
Pontiac	1968-1972	GTO, LeMans, Tempest	Upper Trailing Arms	1202
Pontiac	1973-1977	LeMans	Upper Trailing Arms	1206AA
Pontiac	1973-1977	Lemans	Upper Trailing Arms	1206

Lower Trailing Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Skylark	Lower Trailing Arms	1302
Buick	1973-1977	Regal	Lower Trailing Arms	1306
Buick	1978-1988	Grand National, Regal	Lower Trailing Arms	1301R
Buick	1978-1988	Grand National, Regal	Lower Trailing Arms	1301
Buick	1978-1996	Roadmaster Sedan, Roadmaster wagon	Lower Trailing Arms	1305
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Lower Trailing Arms	1313
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Lower Trailing Arms	1314
Chevrolet	1964-1972	Chevelle, El Camino, Malibu, Monte Carlo	Lower Trailing Arms	1302
Chevrolet	1973-1977	Chevelle, El Camino, Malibu, Monte Carlo	Lower Trailing Arms	1306
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Lower Trailing Arms	1301
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Lower Trailing Arms	1301R
Chevrolet	1978-1996	Caprice, Impala, Impala SS	Lower Trailing Arms	1305
Chevrolet	1998-2002	Camaro	Lower Trailing Arms	1301
Chevrolet	1998-2002	Camaro	Lower Trailing Arms	1301R
Ford	1979-1998	Mustang	Lower Trailing Arms	1304
Ford	1979-1998	Mustang	Lower Trailing Arms	1304R
Ford	1999-2003	Mustang	Lower Trailing Arms	1311
Ford	1999-2003	Mustang	Lower Trailing Arms	1311R
Ford	2005-2012	Mustang	Lower Trailing Arms	1316
Oldsmobile	1964-1972	442, Cutlass	Lower Trailing Arms	1302
Oldsmobile	1973-1977	Cutlass	Lower Trailing Arms	1306
Oldsmobile	1978-1988	Cutlass	Lower Trailing Arms	1301
Oldsmobile	1978-1988	Cutlass	Lower Trailing Arms	1301R
Pontiac	1964-1972	GTO, LeMans, Tempest	Lower Trailing Arms	1302
Pontiac	1973-1977	Lemans	Lower Trailing Arms	1306
Pontiac	1978-1988	Grand Prix, LeMans	Lower Trailing Arms	1301
Pontiac	1978-1988	Grand Prix, LeMans	Lower Trailing Arms	1301R
Pontiac	1998-2002	Firebird	Lower Trailing Arms	1301
Pontiac	1998-2002	Firebird	Lower Trailing Arms	1301R

T Arm Mount Braces

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1967	Skylark	T Arm Mount Braces	1403
Buick	1968-1972	Skylark	T Arm Mount Braces	1402
Buick	1978-1988	Grand National, Regal	T Arm Mount Braces	1401
Buick	1978-1988	Regal	T Arm Mount Braces	1401
Chevrolet	1964-1967	Chevelle, El Camino, Malibu, Monte Carlo	T Arm Mount Braces	1403
Chevrolet	1968-1972	Chevelle, El Camino, Malibu, Monte Carlo	T Arm Mount Braces	1402
Chevrolet	1978-1988	Chevelle, El Camino, Malibu, Monte Carlo	T Arm Mount Braces	1401
Oldsmobile	1964-1967	442, Cutlass	T Arm Mount Braces	1403
Oldsmobile	1968-1972	442, Cutlass	T Arm Mount Braces	1402
Oldsmobile	1978-1988	Cutlass	T Arm Mount Braces	1401
Pontiac	1964-1967	GTO, LeMans, Tempest	T Arm Mount Braces	1403
Pontiac	1968-1972	GTO, LeMans, Tempest	T Arm Mount Braces	1402
Pontiac	1978-1988	Grand Prix, LeMans	T Arm Mount Braces	1401



Order Now 877.466.7655

Rear Suspension Packages

Hotchkis Sport Suspension Upper and Lower Trailing Arms work together to positively locate and control the rear axle. Launches are quicker, smoother and more consistent by reducing wheel hop. Our fabricated Upper Trailing arms allow for easy pinion angle adjustment to better refine your Muscle Car. Cornering and overall stability are dramatically improved through sway bar effectiveness creating increased roll stiffness. Designed as direct replacements

for stock weak stamped trailing arms, our Rear Trailing arms feature TIG-welded construction and feature quiet operating greasable Swivel Style polyurethane bushings. Our unique Swivel Bushing allows our Trailing Arms to articulate freely during suspension travel for improve vehicle performance. Like all Hotchkis Sport Suspension products, these Upper and Lower Trailing Arms are proudly designed, track tested, manufactured and powdercoated in the USA.



Suspension Packages

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1967	Skylark	Adj Rear Suspen Pckg	1804A
Buick	1964-1967	Skylark	Rear Suspension Pckg	1804
Buick	1968-1972	Skylark	Adj Rear Suspen Pckg	1803A
Buick	1968-1972	Skylark	Rear Suspension Pckg	1803
Buick	1978-1988	Grand National, Regal	Adj Rear Suspen Pckg	1802A
Buick	1978-1988	Grand National, Regal	Rear Suspension Pckg	1802
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Dbl U. Rear Package	1813
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Single UpperRear Pkg	1820
Chevrolet	1963-1972	C-10 Pickup 2wd Truck (Models with coil spring rear suspension only)	C-10 Rear Suspension	18390
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Dbl U. Rear Package	1814
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Single UpperRear Pkg	1819
Chevrolet	1964-1967	El Camino, Malibu, Monte Carlo, Chevelle	Adj Rear Suspen Pckg	1804A

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1964-1967	El Camino, Malibu, Monte Carlo, Chevelle	Rear Suspension Pckg	1804
Chevrolet	1967-1970	Bel Air, Biscayne, Caprice, Impala	Dbi U. Rear Package	1822
Chevrolet	1967-1970	Bel Air, Biscayne, Caprice, Impala	Single UpperRear Pkg	1821
Chevrolet	1968-1972	El Camino, Malibu, Monte Carlo, Chevelle	Adj Rear Suspen Pckg	1803A
Chevrolet	1968-1972	El Camino, Malibu, Monte Carlo, Chevelle	Rear Suspension Pckg	1803
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Adj Rear Suspen Pckg	1802A
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Rear Suspension Pckg	1802
Chevrolet	1978-1996	Caprice, Impala	Rear Suspension Pckg	1812
Chevrolet	1982-2002	Camaro	Rear Suspension Pckg	1801
Chevrolet	1982-2002	Camaro	Rear Suspension Pckg	1801R
Ford	1979-1998	Mustang	Adj Rear Suspen Pckg	1805A
Ford	1979-1998	Mustang	Rear Suspension Pckg	1805
Ford	1979-1998	Mustang	Rear Suspension Pckg	1805R
Ford	1999-2004	Mustang	Adj Rear Suspen Pckg	1815A
Ford	1999-2004	Mustang	Rear Suspension Pckg	1815
Ford	1999-2004	Mustang	Rear Suspension Pckg	1815R
Ford	2011-2012	Mustang	Rear Suspension Pckg	1823
Oldsmobile	1964-1967	442, Cutlass	Adj Rear Suspen Pckg	1804A
Oldsmobile	1964-1967	442, Cutlass	Rear Suspension Pckg	1804
Oldsmobile	1968-1972	442, Cutlass	Adj Rear Suspen Pckg	1803A
Oldsmobile	1968-1972	442, Cutlass	Rear Suspension Pckg	1803
Oldsmobile	1978-1988	Cutlass	Adj Rear Suspen Pckg	1802A
Oldsmobile	1978-1988	Cutlass	Rear Suspension Pckg	1802
Pontiac	1964-1967	GTO, LeMans, Tempest	Adj Rear Suspen Pckg	1804A
Pontiac	1964-1967	GTO, LeMans, Tempest	Rear Suspension Pckg	1804
Pontiac	1968-1972	GTO, LeMans, Tempest	Adj Rear Suspen Pckg	1803A
Pontiac	1968-1972	GTO, LeMans, Tempest	Rear Suspension Pckg	1803
Pontiac	1978-1988	Grand Prix, LeMans	Adj Rear Suspen Pckg	1802A
Pontiac	1978-1988	Grand Prix, LeMans	Rear Suspension Pckg	1802
Pontiac	1982-2002	Firebird	Rear Suspension Pckg	1801
Pontiac	1982-2002	Firebird	Rear Suspension Pckg	1801R

Extended Rear Suspension

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1978-1996	Impala SS	Xtend RearSuspension	1811

Rebuild Service Kits



Hotchkis Sport Suspension Rebuild Service Kits are specifically designed to restore your Hotchkis Sport Suspension system to give you maximum "as new" performance. Engineered to perform and made in USA with quality reliable parts. Rebuild Kits are indicated with "RB" at the end of our original part number.

A-Arm Upper & Lower Rebuild Kits (Bushings)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1104RB
Buick	1973-1977	Regal	Bushing Rebuild Kit	1306RB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1102RB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1103RB
Buick	1978-1988	Regal, Grand National	Bushing Rebuild Kit	1101RB
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1213RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo, Chevelle	Bushing Rebuild Kit	1104RB
Chevrolet	1967-1969	Camaro	Bushing Rebuild Kit	1107RB
Chevrolet	1968-1974	Nova	Bushing Rebuild Kit	1107RB
Chevrolet	1973-1977	Chevelle, El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	1306RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo, Chevelle	Bushing Rebuild Kit	1102RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo, Chevelle	Bushing Rebuild Kit	1103RB
Chevrolet	1978-1988	El Camino	Bushing Rebuild Kit	1101RB
Chevrolet	1978-1988	Malibu, Monte Carlo	Bushing Rebuild Kit	1101RB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1104RB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1103RB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1102RB
Oldsmobile	1978-1988	Cutlass	Bushing Rebuild Kit	1101RB
Oldsmobile	1973-1977	Cutlass	Bushing Rebuild Kit	1306RB
Pontiac	1964-1972	LeMans, GTO, Tempest	Bushing Rebuild Kit	1104RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1967-1969	Firebird	Bushing Rebuild Kit	1107RB
Pontiac	1973-1977	Lemans	Bushing Rebuild Kit	1306RB
Pontiac	1964-1972	LeMans, GTO, Tempest	Bushing Rebuild Kit	1103RB
Pontiac	1964-1972	Tempest, GTO, LeMans	Bushing Rebuild Kit	1102RB
Pontiac	1978-1988	Grand Prix, LeMans	Bushing Rebuild Kit	1101RB

Leaf Spring Rebuild Kits (Bushings, Pads, Hardware)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1969	Camaro	Bsh RB Kt Hotchkis leafs 2407C	2407CRB
Chevrolet	1968-1975	Nova	Bsh RB Kt Hotchkis leafs 2407C	2407CRB
Chevrolet	1970-1981	Camaro	Bushing Rebuild Kit	2408CRB
Ford	1997-2003	F-150	Bushing Rebuild Kit	2412RB
Ford	1997-2005	Lightning	Bushing Rebuild Kit	2412RB
Pontiac	1970-1973	Firebird	Bushing Rebuild Kit	2408CRB
Pontiac	1967-1969	Pontiac	Bsh RB Kt Hotchkis leafs 2407C	2407CRB

Trailing Arm Swivel Bushing Upgrades

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1302SRB
Buick	1978-1988	Grand National, Regal	Bushing Rebuild Kit	1301SRB
Chevrolet	1964-1972	Chevelle, El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	1302SRB
Chevrolet	1993-2003	Camaro	Bushing Rebuild Kit	1301SRB
Chevrolet	1963-1972	C-10 Bushing upgrade for the rear truck arm suspension	Swivel Bushing Kit	21390
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1302SRB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	1302SRB
Pontiac	1993-2003	Firebird	Bushing Rebuild Kit	1301SRB

Camber Plate & Link Rebuild Kits (Bushings)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
BMW	2002-2006	Mini Cooper S, R53	Bushing Rebuild Kit	13810RB
BMW	2002-2006	Mini Cooper S, R53	Bushing Rebuild Kit	30835RB
BMW	2002-2006	Mini Cooper, Mini Cooper S, R53	Bushing Rebuild Kit	30830RB
BMW	2002-2006	Mini Cooper, Mini Cooper S, R53	Bushing Rebuild Kit	30832RB
BMW	2002-2006	Mini Cooper, Cooper S	Bushing Rebuild Kit	13810RB
BMW	2002-2006	Mini Cooper, Mini Cooper S, R53	Bushing Rebuild Kit	13800RB
Ford	1979-1993	Mustang	Bushing Rebuild Kit	3001RB
Scion	2005-2008	Scion TC	Bushing Rebuild Kit	12425RB

End Links Rebuild Kits (Rod Ends, Bushings)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1104-ELK
Chevrolet	1964-1972	Chevelle, Malibu, El Camino, Monte Carlo	Bushing Rebuild Kit	1104-ELK
Chevrolet	2010-2012	Camaro Convertible	Bushing Rebuild Kit	25109F-RB
Chevrolet	2010-2012	Camaro Coupe	Bushing Rebuild Kit	25109F-SP
Chevrolet	2010-2012	Camaro Coupe, Camaro Convertible	Bushing Rebuild Kit	25109F-RB
Dodge	2003-2005	Neon	Bushing Rebuild Kit	25419RB
Dodge	2003-2005	SRT-4	Bushing Rebuild Kit	25419RB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1104-ELK
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	1104-ELK
Subaru	2002-2007	WRX	Bushing Rebuild Kit	25406RRB
Subaru	2002-2007	WRX Wagon	Bushing Rebuild Kit	25406RRB

Spring Rebuild Kits (Bump Stops)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Acura	2002-2006	RSX	Bushing Rebuild Kit	19404RB
BMW	2002-2006	Cooper, Cooper S	Bushing Rebuild Kit	19800RB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1901FRB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1916FRB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Cadillac	2003-2007	CTS V6	Bushing Rebuild Kit	1979RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo, Chevelle	Bushing Rebuild Kit	1901FRB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo, Chevelle	Bushing Rebuild Kit	1916FRB
Chevrolet	1967-1969	Camaro	Bushing Rebuild Kit	1907FRB
Chevrolet	1968-1974	Nova	Bushing Rebuild Kit	1907FRB
Chevrolet	1970-1981	Camaro	Bushing Rebuild Kit	1908FRB
Chevrolet	1970-1981	Camaro	Bushing Rebuild Kit	1909FRB
Chevrolet	1975-1979	Nova	Bushing Rebuild Kit	1908FRB
Chevrolet	1975-1979	Nova	Bushing Rebuild Kit	1909FRB
Chevrolet	1999-2006	Silverado 1500	Bushing Rebuild Kit	1914FRB
Chevrolet	2000-2006	Avalanche, Suburban	Bushing Rebuild Kit	1924RB
Chevrolet	1978-1996	Impala SS, Caprice, Roadmaster Sedan, Roadmaster wagon	Bushing Rebuild Kit	1922RB
Chrysler	2005-2008	300, 300C, 300 V6	Bushing Rebuild Kit	19101RB
Chrysler	2006-2009	2006-2009 300C, SRT8, V8	Bushing Rebuild Kit	19105RB
Dodge	1997-2004	Dakota	Bushing Rebuild Kit	1912FRB
Dodge	1997-up	Dakota V6 Q Cab, V8 Ext Cab, V8 Q Cab, Durango	Bushing Rebuild Kit	1913FRB
Dodge	2002-2005	4.7L Quad Cab, 2wd	Bushing Rebuild Kit	1940RB
Dodge	2003-2005	SRT-4	Bushing Rebuild Kit	19419RB
Dodge	2005-2008	Magnum, Charger V6	Bushing Rebuild Kit	19101RB
Dodge	2006-2009	Charger V8 2012 300S V8	Bushing Rebuild Kit	19104RB
Ford	1996-2004	Mustang	Bushing Rebuild Kit	1923RB
Ford	1997-2003	F-150	Bushing Rebuild Kit	1939FRB
Ford	1997-2003	F-150 2wd Supercrew	Bushing Rebuild Kit	1915FRB
Ford	1997-2003	F-150 2wd Extended Cab	Bushing Rebuild Kit	1915FRB
Ford	1997-2005	Lightning	Bushing Rebuild Kit	1939FRB
GM	1967-1969	F-Body	Bushing Rebuild Kit	1906FRB
GM	1968-1974	X-Body	Bushing Rebuild Kit	1906FRB
GM	1978-1988	F Body	Bushing Rebuild Kit	1902FRB
GM	1978-1988	G Body	Bushing Rebuild Kit	1902FRB
GMC	1999-2006	Sierra	Bushing Rebuild Kit	1914FRB
GMC	2000-2006	Yukon, Yukon XL	Bushing Rebuild Kit	1924RB
Lexus	2001-2005	IS300	Bushing Rebuild Kit	19410RB
Mitsubishi	2003-2007	EVO 8, EVO 9	Bushing Rebuild Kit	19423RB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1901FRB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1916FRB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	1901FRB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	1916FRB
Pontiac	1967-1969	Firebird	Bushing Rebuild Kit	1907FRB
Pontiac	1970-1981	Firebird	Bushing Rebuild Kit	1908FRB
Pontiac	1970-1981	Firebird	Bushing Rebuild Kit	1909FRB
Pontiac	1971-1974	Ventura	Bushing Rebuild Kit	1907FRB
Pontiac	2002-2005	Vibe	Bushing Rebuild Kit	19403RB
Subaru	2001-2003	WRX	Bushing Rebuild Kit	19406RB
Subaru	2004-2006	WRX	Bushing Rebuild Kit	19415RB
Toyota	2000-2005	Celica	Bushing Rebuild Kit	19400RB
Toyota	2002-2005	Corolla, Matrix	Bushing Rebuild Kit	19403RB
Scion	2004-2008	xA, xB	Bushing Rebuild Kit	19412RB



Boot & Strut Rod Rebuild Kits (Boot Kits)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1966-1970	Cornet, Super Bee	Boot Kit Strut Rods	14366-BK
Dodge	1966-1970	Coronet, Super Bee	Boot Kit	1110-BK
Dodge	1966-1970	Dodge Coronet, Super Bee	Boot Kit	16366-BK
Dodge	1967-1972	Dart	Boot Kit	1112-BK
Dodge	1967-1972	Dart	Boot Kit	16385-BK
Dodge	1967-1972	Dart	Boot Kit Strut Rods	14385-BK
Dodge	1970-1974	Challenger	Boot Kit	1110-BK
Dodge	1970-1974	Challenger	Boot Kit Strut Rods	14366-BK
Dodge	1970-1974	Challenger	Boot Kit	16366-BK
Dodge	1973-1976	Dart, Dart Sport	Boot Kit	1112-BK
Dodge	1973-1976	Dart, Dart Sport	Boot Kit Strut Rods	14385-BK
Dodge	1973-1976	Dart, Dart Sport	Boot Kit	16385-BK
Dodge	1973-1976	Dart, Dart Sport	Boot Kit	1112-BK

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Plymouth	1966-1969	GTX	Boot Kit	16366-BK
Plymouth	1966-1969	GTX	Boot Kit Strut Rods	14366-BK
Plymouth	1966-1969	GTX	Boot Kit	1110-BK
Plymouth	1966-1970	Satellite	Boot Kit	16366-BK
Plymouth	1966-1970	Satellite	Boot Kit Strut Rods	14366-BK
Plymouth	1966-1970	Satellite	Boot Kit	1110-BK
Plymouth	1967-1969	Barracuda	Boot Kit Strut Rods	14385-BK
Plymouth	1967-1969	Barracuda	Boot Kit	1112-BK
Plymouth	1967-1969	Barracuda	Boot Kit	16385-BK
Plymouth	1967-1972	Valiant	Boot Kit	16385-BK
Plymouth	1967-1972	Valiant	Boot Kit	1112-BK
Plymouth	1967-1972	Valiant	Boot Kit Strut Rods	14385-BK
Plymouth	1969-1971	Roadrunner	Boot Kit	1110-BK
Plymouth	1969-1971	Roadrunner	Boot Kit	16366-BK
Plymouth	1969-1971	Roadrunner	Boot Kit Strut Rods	14366-BK
Plymouth	1970-1972	Duster	Boot Kit	16385-BK
Plymouth	1970-1972	Duster	Boot Kit Strut Rods	14385-BK
Plymouth	1970-1972	Duster	Boot Kit	1112-BK
Plymouth	1970-1974	Barracuda	Boot Kit	16366-BK
Plymouth	1970-1974	Barracuda	Boot Kit Strut Rods	14366-BK
Plymouth	1970-1974	Barracuda.	Boot Kit	1110-BK
Plymouth	1971-1972	Scamp	Boot Kit	1112-BK
Plymouth	1971-1972	Scamp	Boot Kit	16385-BK
Plymouth	1971-1972	Scamp	Boot Kit Strut Rods	14385-BK
Plymouth	1973-1976	Duster, Scamp, Valiant	Boot Kit	16385-BK
Plymouth	1973-1976	Duster, Scamp, Vallant	Boot Kit	1112-BK
Plymouth	1973-1976	Duster, Scamp, Vallant	Boot Kit Strut Rods	14385-BK

Sway Bar Rebuild Kits (Bushings, Endlinks, Hardware)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Acura	2002-2006	RSX	Bushing Rebuild Kit	22404FRB
Acura	2002-2006	RSX	Bushing Rebuild Kit	22404RRB
Acura	2002-2006	RSX	Bushing Rebuild Kit	22405RRB
Acura	2002-2006	RSX	Bushing Rebuild Kit	22404RB
Acura	2002-2006	RSX	Bushing Rebuild Kit	22405RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Audi	1996-2001	A4 Quattro	Bushing Rebuild Kit	22801RB
Audi	1996-2001	S4	Bushing Rebuild Kit	22801RB
Audi	2000-2004	A6	Bushing Rebuild Kit	22822RB
Audi	2001-1004	Allroad	Bushing Rebuild Kit	22815RB
Audi	2002-2008	A4	Bushing Rebuild Kit	22823RB
Audi	2003-2004	RS6	Bushing Rebuild Kit	22827RB
Audi	2004-2008	B6 /B7 S4	Bushing Rebuild Kit	22829RB
BMW	2001-2006	M3	Bushing Rebuild Kit	22825RB
BMW	2001-2006	M3	Bushing Rebuild Kit	22826RB
BMW	2002-2006	Cooper	Bushing Rebuild Kit	22800FRB
BMW	2002-2006	Cooper	Bushing Rebuild Kit	22800RRB
BMW	2002-2006	Cooper	Bushing Rebuild Kit	22810RB
BMW	2002-2006	Cooper	Bushing Rebuild Kit	22811RRB
BMW	2002-2006	Cooper S	Bushing Rebuild Kit	22800FRB
BMW	2002-2006	Cooper S	Bushing Rebuild Kit	22800RB
BMW	2002-2006	Cooper S	Bushing Rebuild Kit	22810RB
BMW	2002-2006	Cooper S	Bushing Rebuild Kit	22810RRB
BMW	2002-2006	Cooper S	Bushing Rebuild Kit	22811RRB
BMW	2002-2006	Cooper, Cooper S	Bushing Rebuild Kit	22800RB
BMW	2007-2009	E92	Bushing Rebuild Kit	22834RB
BMW	2002-2008	Z4	Bushing Rebuild Kit	22817RB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	2202FRB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	2202RB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	2282RB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	2282RRB
Buick	1978-1988	Grand National , Regal	Bushing Rebuild Kit	2201RB
Buick	1978-1988	Grand National, Regal	Bushing Rebuild Kit	2201FRB
Buick	1978-1996	Roadmaster Sedan	Bushing Rebuild Kit	2205FRB
Buick	1978-1996	Roadmaster Sedan, Roadmaster Wagon	Bushing Rebuild Kit	1205RB
Buick	1978-1996	Roadmaster Sedan, Roadmaster Wagon	Bushing Rebuild Kit	2205RB
Buick	1978-1996	Roadmaster wagon	Bushing Rebuild Kit	2205FRB
Buick	1978-1996	Roadmaster wagon	Bushing Rebuild Kit	2206RB
Cadillac	2000-2006	Escalade	Bushing Rebuild Kit	2240RB
Cadillac	2000-2006	Escalade	Bushing Rebuild Kit	2249RB
Cadillac	2003-2006	CTS-V	Bushing Rebuild Kit	2280RB
Cadillac	2003-2007	CTS V6	Bushing Rebuild Kit	2279RB
Chevrolet	1985-1998	Siverado Sierra	Bushing Rebuild Kit	2210RB
Chevrolet	1988-1998	Siverado Sierra	Bushing Rebuild Kit	2233RB
Chevrolet	1997-2004	Corvette	Bushing Rebuild Kit	2234RB
Chevrolet	1999-2004	Siverado Sierra	Bushing Rebuild Kit	2228RB
Chevrolet	1999-2004	Siverado Sierra	Bushing Rebuild Kit	2230RB
Chevrolet	1959-1964	Bel Air	Bushing Rebuild Kit	2269FRB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1959-1964	Biscayne, Caprice, Impala	Bushing Rebuild Kit	2269RB
Chevrolet	1959-1964	Biscayne, Caprice, Impala, B Body	Bushing Rebuild Kit	2268RRB
Chevrolet	1959-1964	Biscayne, Caprice, Impala, Bel Air	Bushing Rebuild Kit	2269FRB
Chevrolet	1959-1964	Biscayne, Caprice, Impala, Bel Air	Bushing Rebuild Kit	2268FRB
Chevrolet	1959-1964	Biscayne, Caprice, Impala, Bel Air	Bushing Rebuild Kit	2268RB
Chevrolet	1959-1964	Caprice	Bushing Rebuild Kit	2268FRB
Chevrolet	1964-1966	Biscayne, Caprice, Impala	Bushing Rebuild Kit	2253RRB
Chevrolet	1964-1966	Biscayne, Caprice, Impala, Bel Air	Bushing Rebuild Kit	2253FRB
Chevrolet	1964-1966	Biscayne, Caprice, Impala, Bel Air	Bushing Rebuild Kit	2253RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	2202FRB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	2202RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	2282RB
Chevrolet	1964-1972	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	2282RRB
Chevrolet	1967-1969	Camaro	Bushing Rebuild Kit	2207FRB
Chevrolet	1967-1969	Camaro	Bushing Rebuild Kit	2207RB
Chevrolet	1967-1969	Camaro	Bushing Rebuild Kit	2207RRB
Chevrolet	1967-1970	Bel Air	Bushing Rebuild Kit	2273FRB
Chevrolet	1967-1970	Bel Air	Bushing Rebuild Kit	2273RB
Chevrolet	1967-1970	Biscayne, Caprice, Impala	Bushing Rebuild Kit	2273FRB
Chevrolet	1967-1970	Biscayne, Caprice, Impala	Bushing Rebuild Kit	2273RRB
Chevrolet	1967-1970	Biscayne, Caprice, Impala, Be Air	Bushing Rebuild Kit	2273RB
Chevrolet	1968-1974	Nova	Bushing Rebuild Kit	2260RB
Chevrolet	1968-1974	Nova	Bushing Rebuild Kit	2260RRB
Chevrolet	1968-1974	Nova	Bushing Rebuild Kit	2207FRB
Chevrolet	1970-1981	Camaro	Bushing Rebuild Kit	2236FRB
Chevrolet	1970-1981	Camaro	Bushing Rebuild Kit	2236RB
Chevrolet	1970-1981	Camaro	Bushing Rebuild Kit	2236RRB
Chevrolet	1975-1979	Nova	Bushing Rebuild Kit	2236FRB
Chevrolet	1975-1979	Nova	Bushing Rebuild Kit	2236RB
Chevrolet	1975-1979	Nova	Bushing Rebuild Kit	2236RRB
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	2201FRB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	2201RB
Chevrolet	1978-1996	Caprice	Bushing Rebuild Kit	2205FRB
Chevrolet	1978-1996	Impala SS	Bushing Rebuild Kit	2205RB
Chevrolet	1978-1996	Impala SS, Caprice	Bushing Rebuild Kit	2205FRB
Chevrolet	1978-1996	Impala, SS, Caprice	Bushing Rebuild Kit	1205RB
Chevrolet	1982-1992	Camaro	Bushing Rebuild Kit	2203FRB
Chevrolet	1982-1992	Camaro	Bushing Rebuild Kit	2203RB
Chevrolet	1982-1992	Camaro	Bushing Rebuild Kit	2203RRB
Chevrolet	1985-1998	Astro Van	Bushing Rebuild Kit	2214RB
Chevrolet	1985-1998	Astro Van	Bushing Rebuild Kit	2215RB
Chevrolet	1988-1998	Siverado Sierra	Bushing Rebuild Kit	2211RB
Chevrolet	1988-1998	Siverado Sierra	Bushing Rebuild Kit	2212RB
Chevrolet	1991-1999	Suburban	Bushing Rebuild Kit	2208RB
Chevrolet	1991-1999	Suburban	Bushing Rebuild Kit	2209RB
Chevrolet	1991-1999	Tahoe	Bushing Rebuild Kit	2208RB
Chevrolet	1991-1999	Tahoe	Bushing Rebuild Kit	2209RB
Chevrolet	1993-2002	Camaro	Bushing Rebuild Kit	2204FRB
Chevrolet	1993-2002	Camaro	Bushing Rebuild Kit	2204RB
Chevrolet	1999-2004	Siverado Sierra	Bushing Rebuild Kit	2229RB
Chevrolet	1999-2004	Siverado Sierra	Bushing Rebuild Kit	2231RB
Chevrolet	2000-2006	Avalanche	Bushing Rebuild Kit	2245RB
Chevrolet	2000-2006	Suburban	Bushing Rebuild Kit	2245RB
Chevrolet	2000-2006	Suburban, Yukon, Yukon XL	Bushing Rebuild Kit	2250RB
Chevrolet	2000-2006	Tahoe	Bushing Rebuild Kit	2240RB
Chevrolet	2000-2006	Tahoe, Yukon, Avalanche	Bushing Rebuild Kit	2249RB
Chevrolet	2000-2006	Tahoe, Yukon, Avalanche	Bushing Rebuild Kit	2250RB
Chevrolet	2001-2008	Trailblazer	Bushing Rebuild Kit	2272RB
Chevrolet	2003-2006	SSR	Bushing Rebuild Kit	2290RB
Chevrolet	2004-2009	Corvette C6	Bushing Rebuild Kit	2284RB
Chevrolet	2004-2009	Z06	Bushing Rebuild Kit	2284RB
Chrysler	2012	300	Bushing Rebuild Kit	22101FRB
Chrysler	2005-2009	300C	Bushing Rebuild Kit	22101FRB
Chrysler	2005-2008	300	Bushing Rebuild Kit	22101RB
Chrysler	2005-2008	300 V6, 300C	Bushing Rebuild Kit	22101RB
Dodge	1997-1999	Dakota 4WD	Bushing Rebuild Kit	2221RB
Dodge	1997-2003	Dakota	Bushing Rebuild Kit	2216RB
Dodge	1998-1999	Durango 4WD	Bushing Rebuild Kit	2222RB
Dodge	1998-2003	Durango	Bushing Rebuild Kit	2217RB
Dodge	2000-2003	Durango	Bushing Rebuild Kit	2246RB
Dodge	2003-2005	SRT-4	Bushing Rebuild Kit	22419RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1966-1970	1966-1970 Cornet, Super Bee	Bushing Rebuild Kit	2254FRB
Dodge	1966-1972	Charger	Bushing Rebuild Kit	2254FRB
Dodge	1970-1974	Challenger	Bushing Rebuild Kit	2254FRB
Dodge	1997-2003	Dakota	Bushing Rebuild Kit	2224RB
Dodge	1998-2003	Durango	Bushing Rebuild Kit	2235RB
Dodge	2000-2003	Dakota	Bushing Rebuild Kit	2247RB
Dodge	2002-2004	Ram	Bushing Rebuild Kit	2265RB
Dodge	2002-2004	Ram	Bushing Rebuild Kit	2266RB
Dodge	2002-2004	Ram	Bushing Rebuild Kit	2267RB
Dodge	2005-2008	Charger V6, Magnum	Bushing Rebuild Kit	22101RB
Dodge	2005-2008	Magnum	Bushing Rebuild Kit	22101FRB
Dodge	2006-2009	Charger	Bushing Rebuild Kit	22101FRB
Ford	1955-1957	T-Bird	Bushing Rebuild Kit	2277RB
Ford	1994-2004	Mustang	Bushing Rebuild Kit	2251FRB
Ford	1994-2004	Mustang	Bushing Rebuild Kit	2251RB
Ford	1994-2004	Mustang	Bushing Rebuild Kit	2251RRB
Ford	1997-2002	Expedition Navigator	Bushing Rebuild Kit	2238RB
Ford	1997-2002	Expedition Navigator	Bushing Rebuild Kit	2239RB
Ford	1997-2002	Expedition Navigator	Bushing Rebuild Kit	2244RB
Ford	1997-2003	F-150	Bushing Rebuild Kit	2243RB
Ford	1997-2003	F-150	Bushing Rebuild Kit	2248RB
Ford	1997-2003	F-150	Bushing Rebuild Kit	2259RB
Ford	1997-2003	F-150	Bushing Rebuild Kit	2241RB
Ford	1997-2003	F-150	Bushing Rebuild Kit	2242RB
Ford	1997-2005	Lightning	Bushing Rebuild Kit	2241RB
Ford	1997-2005	Lightning	Bushing Rebuild Kit	2242RB
Ford	2005-2012	Mustangs	Bushing Rebuild Kit	22102RB
GM	2003-2009	H2	Bushing Rebuild Kit	2274RB
GM	2003-2009	H2	Bushing Rebuild Kit	2275RB
GM	2003-2009	H2	Bushing Rebuild Kit	2276RB
GMC	1991-1999	Yukon, Yukon XL	Bushing Rebuild Kit	2208RB
GMC	1991-1999	Yukon, Yukon XL	Bushing Rebuild Kit	2209RB
GMC	1991-1999	Yukon, Yukon XL	Bushing Rebuild Kit	2209RB
GMC	2000-2006	Yukon	Bushing Rebuild Kit	2240RB
GMC	2001-2008	Envoy	Bushing Rebuild Kit	2272RB
GMC	2001-2008	Envoy	Bushing Rebuild Kit	2272RB
Infiniti	2003-2008	2003 - 2008 G35 Sedan	Bushing Rebuild Kit	22413RB
Infiniti	2003-2008	G35 Coupe, Sedan	Bushing Rebuild Kit	22413RB
Infiniti	2004-2006	GTO	Bushing Rebuild Kit	2278RB
Infiniti	2007-2008	G35X	Bushing Rebuild Kit	22443RB
Infiniti	2009-2011	G37X	Bushing Rebuild Kit	22443RB
Infiniti	2007-20012	G35	Bushing Rebuild Kit	22441RB
Infiniti	2008-2012	G37S, G37	Bushing Rebuild Kit	22441RB
Jeep	1992-1998	Grand Cherokee	Bushing Rebuild Kit	2223RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Lexus	2001-2005	IS300	Bushing Rebuild Kit	22410RB
Mazda	2006-2007	MX-7	Bushing Rebuild Kit	22436RB
Mitsubishi	2003-2007	EVO 8	Bushing Rebuild Kit	22423RB
Mitsubishi	2003-2007	EVO 9	Bushing Rebuild Kit	22423RB
Nissan	2009-2012	370Z	Bushing Rebuild Kit	22441RB
Oldsmobile	1964-1972	442	Bushing Rebuild Kit	2202FRB
Oldsmobile	1964-1972	442	Bushing Rebuild Kit	2202RB
Oldsmobile	1964-1972	442	Bushing Rebuild Kit	2282RB
Oldsmobile	1964-1972	442	Bushing Rebuild Kit	2282RRB
Oldsmobile	1964-1972	Cutlass	Bushing Rebuild Kit	2202FRB
Oldsmobile	1964-1972	Cutlass	Bushing Rebuild Kit	2202RB
Oldsmobile	1964-1972	Cutlass	Bushing Rebuild Kit	2282RB
Oldsmobile	1964-1972	Cutlass	Bushing Rebuild Kit	2282RRB
Oldsmobile	1978-1988	Cutlass	Bushing Rebuild Kit	2201RB
Oldsmobile	1978-1988	Cutlass	Bushing Rebuild Kit	2201FRB
Plymouth	1966-1970	1966-1970 GTX , Satellite	Bushing Rebuild Kit	2254FRB
Plymouth	1966-1971	Road Runner	Bushing Rebuild Kit	2254FRB
Plymouth	1970-1974	Cuda	Bushing Rebuild Kit	2254FRB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	2202FRB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	2202RB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	2282RB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	2282RRB
Pontiac	1967-1969	Firebird	Bushing Rebuild Kit	2207FRB
Pontiac	1967-1969	Firebird	Bushing Rebuild Kit	2207RB
Pontiac	1967-1969	Firebird	Bushing Rebuild Kit	2207RRB
Pontiac	1970-1981	Firebird	Bushing Rebuild Kit	2236FRB
Pontiac	1970-1981	Firebird	Bushing Rebuild Kit	2236RB
Pontiac	1970-1981	Firebird	Bushing Rebuild Kit	2236RRB
Pontiac	1971-1974	Ventura	Bushing Rebuild Kit	2207FRB
Pontiac	1971-1974	Ventura	Bushing Rebuild Kit	2260RB
Pontiac	1971-1974	Ventura	Bushing Rebuild Kit	2260RRB
Pontiac	1978-1988	Grand Prix , LeMans	Bushing Rebuild Kit	2201FRB
Pontiac	1978-1988	Grand Prix, LeMans	Bushing Rebuild Kit	2201RB
Pontiac	1982-1992	Firebird	Bushing Rebuild Kit	2203FRB
Pontiac	1982-1992	Firebird	Bushing Rebuild Kit	2203RB
Pontiac	1982-1992	Firebird	Bushing Rebuild Kit	2203RRB
Pontiac	1993-2002	Firebird	Bushing Rebuild Kit	2204FRB
Pontiac	1993-2002	Firebird	Bushing Rebuild Kit	2204RB
Pontiac	2002-2005	Vibe	Bushing Rebuild Kit	22402RB
Subaru	2001-2003	WRX	Bushing Rebuild Kit	22406RB
Subaru	2001-2003	WRX	Bushing Rebuild Kit	22407RB
Subaru	2001-2003	WRX	Bushing Rebuild Kit	22407RRB
Subaru	2002-2008	WRX	Bushing Rebuild Kit	22427RB
Subaru	2002-2008	WRX	Bushing Rebuild Kit	22428RB
Subaru	2004-2008	WRX STI	Bushing Rebuild Kit	22417RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Subaru	2004-2008	WRX STI	Bushing Rebuild Kit	22417RRB
Subaru	2004-2008	WRX STI	Bushing Rebuild Kit	22418RB
Subaru	2004-2008	WRX STI	Bushing Rebuild Kit	22418RRB
Toyota	1998-2002	Corolla	Bushing Rebuild Kit	22421RB
Toyota	2000-2005	Celica	Bushing Rebuild Kit	22400FRB
Toyota	2000-2005	Celica	Bushing Rebuild Kit	22400RB
Toyota	2000-2005	Celica	Bushing Rebuild Kit	22401RB
Toyota	2000-2005	Celica	Bushing Rebuild Kit	22401RRB
Toyota	2002-2005	Corolla	Bushing Rebuild Kit	22402RB
Toyota	2002-2005	Matrix	Bushing Rebuild Kit	22402RB
Scion	2004-2008	Scion xA	Bushing Rebuild Kit	22412RB
Scion	2004-2008	Scion xB	Bushing Rebuild Kit	22412RB
Scion	2005-2008	Scion TC	Bushing Rebuild Kit	22425RB
Volkswagen	2004-2005	R32	Bushing Rebuild Kit	22804RB
Volkswagen	1999-2004	Golf	Bushing Rebuild Kit	22813RB
Volkswagen	1999-2004	GTI, Jetta	Bushing Rebuild Kit	22813RB

Rear Suspension Rebuild Kits

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1967	Skylark	Bushing Rebuild Kit	1203RB
Buick	1964-1967	Skylark	Bushing Rebuild Kit	1203AARB
Buick	1964-1972	Skylark	Bushing Rebuild Kit	1302RB
Buick	1968-1972	Skylark	Bushing Rebuild Kit	1202RB
Buick	1968-1972	Skylark	Bushing Rebuild Kit	1202AARB
Buick	1973-1977	Regal	Bushing Rebuild Kit	1206RB
Buick	1978-1988	Grand National, Regal	Bushing Rebuild Kit	1301RB
Buick	1978-1988	Grand National, Regal	Bushing Rebuild Kit	1201RB
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1313RB
Chevrolet	1959-1964	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1513RB
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1214RB
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1314RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1964-1966	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1514RB
Chevrolet	1964-1967	Monte Carlo, Chevelle, El Camino, Malibu	Bushing Rebuild Kit	1203RB
Chevrolet	1964-1967	Monte Carlo, Chevelle, El Camino, Malibu	Bushing Rebuild Kit	1203AARB
Chevrolet	1964-1972	Chevelle, El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	1302RB
Chevrolet	1967-1970	Bel Air, Biscayne, Caprice, Impala	Bushing Rebuild Kit	1215RB
Chevrolet	1968-1972	Chevelle, El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	1202AARB
Chevrolet	1968-1972	Monte Carlo, Chevelle, El Camino, Malibu	Bushing Rebuild Kit	1202RB
Chevrolet	1973-1977	Monte Carlo, Chevelle, El Camino, Malibu	Bushing Rebuild Kit	1206RB
Chevrolet	1978-1988	A/G Body	Bushing Rebuild Kit	1201AARB
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	1201RB
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Bushing Rebuild Kit	1301RB
Chevrolet	1978-1996	Caprice, Impala, Impala SS	Bushing Rebuild Kit	1305RB
Chevrolet	1982-2002	Camaro	Bushing Rebuild Kit	1501RB
Chevrolet	1998-2002	Camaro	Bushing Rebuild Kit	1301RB
Ford	1979-1998	Mustang	Bushing Rebuild Kit	1304RB
Ford	1979-2004	Mustang	Bushing Rebuild Kit	1204RB
Ford	1979-2004	Mustang	Bushing Rebuild Kit	1204AARB
Ford	1999-2003	Mustang	Bushing Rebuild Kit	1311RB
Ford	2005-2012	Mustang	Bushing Rebuild Kit	15102RB
Oldsmobile	1964-1967	442, Cutlass	Bushing Rebuild Kit	1203RB
Oldsmobile	1964-1967	442, Cutlass	Bushing Rebuild Kit	1203AARB
Oldsmobile	1964-1972	442, Cutlass	Bushing Rebuild Kit	1302RB
Oldsmobile	1968-1972	442, Cutlass	Bushing Rebuild Kit	1202AARB
Oldsmobile	1968-1972	442, Cutlass	Bushing Rebuild Kit	1202RB
Oldsmobile	1973-1977	Cutlass	Bushing Rebuild Kit	1206RB
Oldsmobile	1978-1988	Cutlass	Bushing Rebuild Kit	1301RB
Oldsmobile	1978-1988	Cutlass	Bushing Rebuild Kit	1201RB
Pontiac	1964-1967	GTO, Le Mans, Tempest	Bushing Rebuild Kit	1203RB

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1964-1967	GTO, Le Mans, Tempest	Bushing Rebuild Kit	1203AARB
Pontiac	1964-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	1302RB
Pontiac	1968-1972	GTO, LeMans, Tempest	Bushing Rebuild Kit	1202RB
Pontiac	1968-1972	GTO, Tempest, Lemans	Bushing Rebuild Kit	1202AARB
Pontiac	1973-1977	Lemans	Bushing Rebuild Kit	1206RB
Pontiac	1978-1988	Grand Prix, LeMans	Bushing Rebuild Kit	1301RB
Pontiac	1978-1988	Lemans, Grand Prix	Bushing Rebuild Kit	1201RB
Pontiac	1982-2002	Firebird	Bushing Rebuild Kit	1501RB
Pontiac	1998-2002	Firebird	Bushing Rebuild Kit	1301RB
Toyota	2000-2005	Celica	Bushing Rebuild Kit	12700RB



Subframe Connector Rebuild Kits (Bushings)

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1969	Camaro Convertibles	Bushing Rebuild Kit	4008RB
Chevrolet	1967-1969	Camaro Coupes	Subframe Conn Rb Kit	4007RB
Pontiac	1967-1969	Firebird Convertibles	Bushing Rebuild Kit	4008RB
Pontiac	1967-1969	Firebird Coupes	Subframe Conn Rb Kit	4007RB



Sport Sway Bars

Improve cornering and straight line stability by reducing body roll with a set of Hotchkis Sport Suspension Sway Bars. Our Sway Bars are CNC bent for a precise fit, feature lightweight hollow construction, include greasable polyurethane bushings, heavy duty brackets, end links* and all hardware. We extensively test our Sway Bars on the street and track to ensure balanced handling with significant vehicle performance improvement. Importantly, our Sway Bars dramatically improve handling without compromising ride quality. Easy to install, powdercoated durable gloss black and proudly made in the USA.

*Some Sway bar kits do not include end-links.

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Acura	2002-2005	RSX	Sway Bar Set Front	22404F
Acura	2002-2006	RSX	End Link Set	25405
Acura	2002-2006	RSX	Front End Link Set	25405F
Acura	2002-2006	RSX	Rear End Link Set	25405R
Audi	1996-2002	Audi B5	Sway Bar Set	22801
Audi	1996-2002	B5	Sway Bar Set Front	22801F
Audi	2000-2004	A6, Quattro, S6	Sway Bar Set	22822
Audi	2000-2006	TT Quattro	Sway Bar Set	22806
Audi	2001-2004	Allroad (A6)	Sway Bar Set Rear	22815R
Audi	2001-2004	Allroad Quattro	Sway Bar Set	22815
Audi	2002-2008	A4	Sway Bar Set	22823
Audi	2002-2008	A4	Sway Bar Set Front	22823F
Audi	2003-2004	RS6	Sway Bar Set	22827
Audi	2004-2008	RS4	Sway Bar Set Front	22832F
Audi	2004-2008	S4	Sway Bar Set	22829
Audi	2006-2010	A3	Sway Bar Set	22833
Audi	2006-2010	A3	Sway Bar Set Front	22833F
Audi	2006-2010	A3	Sway Bar Set Rear	22833R
Audi	2007-2008	B7, RS4	Sway Bar Set	22832
Audi	2007-2008	RS4. Designed for track use and must be used with a Hotchkis front sway bar.	Sway Bar Set Rear	22832R
Audi	2009-2011	A4, S4 (B8)	Sway Bar Set	22836
Audi	2009-2011	A4/S4 (B8)	Sway Bar Set Front	22836F
Audi	2009-2011	A4/S4 (B8)	Sway Bar Set Rear	22836R

MAKE	YEAR	MODEL	DESCRIPTION	PART #
BMW	1992-1998	E36	Sway Bar Set	22835
BMW	1992-1998	E36	Sway Bar Set Front	22835F
BMW	1992-1998	E36	Sway Bar Set Rear	22835R
BMW	1999-2005	3 Series	Front Endlink Kit	25826F
BMW	1999-2005	E46	Front Endlink Kit	25826F
BMW	1999-2006	E46	Sway Bar Set	22825
BMW	1999-2006	E46	Sway Bar Set Front	22825F
BMW	1999-2006	E46, M3	Endlink Rear Kit	25826
BMW	2001-2006	E46 M3	Sway Bar Set	22826
BMW	2001-2006	E46 M3	Sway Bar Set Front	22826F
BMW	2001-2006	E46 M3	Sway Bar Set Rear	22826R
BMW	2001-2006	E46, M3	Front Endlink Kit	25826F
BMW	2001-2006	M3	Sway Bar Set Rear	22825R
BMW	2002-2006	Mini Cooper R53	Comp Sway Bar Set	22810
BMW	2002-2006	Mini Cooper R53	Sway Bar Set	22800
BMW	2002-2006	Mini Cooper R53	Sway Bar Set Front	22800F
BMW	2002-2006	Mini Cooper R53. Recommended for competition use only.	Sway Bar Set Rear	22810R
BMW	2002-2008	Mini Cooper	Sway Bar Set Rear	22800R
BMW	2007-2009	E90	Sway Bar Set Front	22834F
BMW	2007-2009	E90, E92	Sway Bar Set	22834
BMW	2007-2009	E92	Endlink Kit	25834
BMW	2007-2009	E92	Front End Link Kit	25834F
BMW	2007-2009	E92	Rear Endlink Kit	25834R
BMW	2007-2009	E92, E90	Sway Bar Set Front	22834F
BMW	2007-2009	E92, E90	Sway Bar Set Rear	22834R
Cadillac	2004-2007	Cadillac CTS-V	Sway Bar Set	2280
Cadillac	2000-2006	Escalade ESV For Vehicles Lowered 3 in.	Sway Bar Set	2250
Cadillac	2000-2006	Escalade EXT For Vehicles Lowered 3 in.	Sway Bar Set	2250
Cadillac	2003-2007	Cadillac CTS	Sway Bar Set	2279
Chevrolet	2010	Camaro	Comp Sway Bar Set	22110
Chevrolet	2010	Camaro	Sway Bar Set	22109
Chevrolet	2010	Camaro	Sway Bar Set Front	22110F
Chevrolet	2010	Camaro	Sway Bar Set Front	22109F
Chevrolet	1955-1957	Chevy	Sway Bar Set	22105
Chevrolet	1955-1957	Chevy	Sway Bar Set Front	22105F
Chevrolet	1955-1957	Chevy	Sway Bar Set Rear	22105R
Chevrolet	1958-1964	B Body	Sway Bar Set	2268
Chevrolet	1958-1964	B-Body	Sway Bar Set Front	2269F

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1958-1964	B-Body	Sway Bar Set Front	2268F
Chevrolet	1958-1964	B-Body (with 605 Steering Box Conversion)	Sway Bar Set	2269
Chevrolet	1959-1964	Biscayne, Caprice, Impala, Bel Air	Sway Bar Set Rear	2268R
Chevrolet	1963-1972	C-10	Sway Bar Set	22108
Chevrolet	1963-1972	C-10 2wd Truck	Sway Bar Set Rear	22108R
Chevrolet	1963-1972	C-10 Pickup 2wd Truck	Sway Bar Set Front	22108F
Chevrolet	1963-1972	C-10 Truck	Comp Sway Bar Set	22390
Chevrolet	1963-1972	C-10 Truck	Sway Bar Set Rear	22390R
Chevrolet	1964-1966	Bel Air	Sway Bar Set Front	2253F
Chevrolet	1964-1966	Biscayne, Caprice, Impala, Bel Air	Sway Bar Set	2253
Chevrolet	1964-1966	Biscayne, Caprice, Impala, Bel Air	Sway Bar Set Front	2253F
Chevrolet	1964-1966	Biscayne, Caprice, Impala, Bel Air	Sway Bar Set Rear	2253R
Chevrolet	1964-1972	El Camino	Sway Bar Set Rear	2202R
Chevrolet	1967-1969	Camaro	R Sway Bar Mt Brace	1415
Chevrolet	1967-1969	Camaro	Sway Bar Set	2207C
Chevrolet	1967-1969	Camaro	Sway Bar Set Rear	2207RC
Chevrolet	1967-1970	B-Body	Sway Bar Set	2273
Chevrolet	1967-1970	B-Body	Sway Bar Set Front	2273F
Chevrolet	1967-1970	B-Body	Sway Bar Set Rear	2273R
Chevrolet	1968-1974	Nova	Sway Bar Set	2260
Chevrolet	1968-1974	Nova	Sway Bar Set Rear	2260R
Chevrolet	1978-1996	Chevrolet Caprice. Designed for Sedans. Wagons use Part # 2206R	Sway Bar Set Rear	2205R
Chevrolet	1978-1996	Impala, Caprice Designed for Sedans. Wagons use Part # 2206R	Sway Bar Set Rear	2205R
Chevrolet	1985-1998	Astro Van	Sway Bar Set Rear	2258RB
Chevrolet	1993-2002	Camaro	Sway Bar Set Rear	22104R
Chevrolet	1997-2004	Corvette W/O Endlinks	Sway Bar Set Rear	2285R
Chevrolet	1997-2004	Corvette	Sway Bar Set	2285
Chevrolet	1999-2005	Silverado SS.	Sway Bar Set	2230
Chevrolet	1999-2005	Silverado SS.	Sway Bar Set	2231
Chevrolet	2000-2006	1500 Suburban For Vehicles Lowered 3 in.	Sway Bar Set	2250
Chevrolet	2000-2006	Avalanche 1500. For Vehicles Lowered 3 in.	Sway Bar Set	2250
Chevrolet	2002-2007	Chevrolet Trailblazer	Sway Bar Set	2272
Chevrolet	2004-2006	SSR	Sway Bar Set	2290

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	2004-2009	Corvette	Sway Bar Set	2284
Chevrolet	2007-2013	Avalanche, Suburban, Tahoe	Sway Bar Set	2291
Chevrolet	2010-2011	Camaro	Front End Link Set	25110F
Chevrolet	2010-2011	Camaro	Front End Links	25109F
Chevrolet	2010-2011	Camaro	Rear End Links	25109R
Chevrolet	2010-2012	Camaro	End Link Set	25109
Chevrolet	2010-2012	Camaro	End Link Set	25110
Chevrolet	2010-2012	Camaro	Sway Bar Set Rear	22110R
Chevrolet	2010-2012	Camaro Convertibles	Sway Bar Set Rear	22109R
Chevrolet	2010-2012	Camaro Coupe	Sway Bar Set Rear	22109R
Chevrolet	2010-2012	Camaro Coupe and Convertible	Rear End Link Set	25110R
Chevrolet	2012-2013	Camaro	Sway Bar Set	22112
Chevrolet	2012-2013	Camaro	Sway Bar Set Front	22112F
Chevrolet	2012-2013	Camaro	Sway Bar Set Rear	22112R
Chrysler	2005-2009	300C 6 cylinder models do not have factory rear bars therefore in order to use bar factory end links must be purchased.	Sway Bar Set	22101
Chrysler	2005-2009	Magnum. 6 cylinder models do not have factory rear bars therefore in order to use bar factory end links must be purchased.	Sway Bar Set	22101
Dodge	1970	Charger, Coronet, Super Bee	Stud Dogbone Bolts	17366
Dodge	1966-1969	B-Body	Sway Bar Set	2255
Dodge	1966-1969	B-Body	Sway Bar Set Front	2255F
Dodge	1966-1969	Charger, Coronet, Super Bee	Stud Dogbone Bolts	17366
Dodge	1966-1970	Cornet	Sway Bar Set Rear	2255R
Dodge	1966-1970	Super Bee	Sway Bar Set Rear	2255R
Dodge	1966-1972	Charger	Sway Bar Set Rear	2255R
Dodge	1967-1972	A-Body	Sway Bar Set	22385
Dodge	1967-1972	A-Body	Sway Bar Set Front	22385F
Dodge	1967-1972	A-Body	Sway Bar Set Rear	22385R
Dodge	1970-1974	Challenger	Stud Dogbone Bolts	17366
Dodge	1970-1974	Challenger	Sway Bar Set Rear	2255R
Dodge	1971-1972	Charger	Stud Dogbone Bolts	17366
Dodge	1973-1976	A-Body	Sway Bar Set	22386
Dodge	1973-1976	A-Body	Sway Bar Set Front	22386F
Dodge	1973-1976	A-Body	Sway Bar Set Rear	22386R

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1997-1999	Dakota 4x4	Sway Bar Set	2221
Dodge	1997-2004	Dakota	Sway Bar Set	2224
Dodge	1997-2004	Dakota For stock height applications.	Sway Bar Set	2216
Dodge	2000-2003	Dakota	Sway Bar Set	2247
Dodge	2002-2004	Ram	Sway Bar Set	2266
Dodge	2002-2004	Ram 1500 2wd. For use on trucks lifted 3-4 in.	Sway Bar Set	2267
Dodge	2002-2004	Ram 1500 2wd. For Stock Height Applications.	Sway Bar Set	2265
Dodge	2003-2005	Neon SRT4	Sway Bar Set	22419
Dodge	2005-2009	Charger 6 cylinder models do not have factory rear bars therefore in order to use bar factory end links must be purchased.	Sway Bar Set	22101
Dodge	2008-2012	Challenger	Sway Bar Set	22107
Dodge	2011-2013	Charger	Sway Bar Set	22111
Dodge	2013-2014	Challenger R/T V6	Sway Bar Set	22121
Ford	1957-1986	Universal for 9 Inch Rear Ends	Sway Bar Axle Mnt Kt	9INCH
Ford	1964-1966	Ford Galaxies	Sway Bar Set Front	22389F
Ford	1964-1966	Mustang Coupe	Sway Bar Set	22114
Ford	1966-1970	Mustang Coupe	Sway Bar Set	22115
Ford	1994-1998	Cobra	Sway Bar Set Front	2251F
Ford	1994-1998	Cobra	Sway Bar Set Rear	2251R
Ford	1994-1998	Cobra, Mustang GT	Sway Bar Set	2251
Ford	1994-1998	Mustang GT	Sway Bar Set Rear	2251R
Ford	1994-1998	Mustang GT, Mustang	Sway Bar Set Front	2251F
Ford	1997-2003	F-150	Sway Bar Set	2243
Ford	1997-2003	F-150	Sway Bar Set	2241
Ford	1997-2003	F-150	Sway Bar Set	2242
Ford	1997-2003	F-150 4wd. For stock height trucks.	Sway Bar Set	2259
Ford	2005-2013	Mustang	Sway Bar Set	22102
GM	1964-1972	A-Body	Sway Bar Set	2202
GM	1964-1972	A-Body	Sway Bar Set	2282
GM	1964-1972	A-Body	Sway Bar Set Front	2202F
GM	1964-1972	A-Body	Sway Bar Set Rear	2282R
GM	1964-1972	A-Body	Sway Bar Set Rear	2202R
GM	1967-1969	F-Body	Sway Bar Set Front	2207F
GM	1970-1981	F-Body	Sway Bar Set	2236

MAKE	YEAR	MODEL	DESCRIPTION	PART #
GM	1970-1981	F-Body	Sway Bar Set Front	2236F
GM	1970-1981	F-Body	Sway Bar Set Rear	2236R
GM	1978-1988	G Body	Sway Bar Set	2201
GM	1978-1988	G Body	Sway Bar Set	2281
GM	1978-1988	G Body	Sway Bar Set Front	2201F
GM	1978-1988	G Body	Sway Bar Set Rear	2201R
GM	1978-1988	G-Body	Sway Bar Set Rear	2281R
GM	1978-1996	B-Body	Sway Bar Set	2205
GM	1978-1996	B-Body	Sway Bar Set Rear	2206R
GM	1978-1996	B-Body Sedan	Sway Bar Set Front	2205F
GM	1978-1996	B-Body Wagons only	Sway Bar Set	2206
GM	1982-1992	F-Body	Sway Bar Set	2203
GM	1982-1992	F-Body	Sway Bar Set Front	2203F
GM	1982-1992	F-Body	Sway Bar Set Rear	2203R
GM	1993-2002	F-Body	Sway Bar Set	2204
GM	1993-2002	F-Body	Sway Bar Set Front	2204F
GM	1999-2005	1500 2WD Pick Up	Sway Bar Set	2228
GM	1999-2005	1500 2WD Pickup	Sway Bar Set	2229
GM	1999-2005	1500 4x4 Pick Up. For 4WD 4 in. lowered height. Also Fits Silverado SS.	Sway Bar Set	2231
GM	1999-2005	1999-2005 GM 1500 4x4 Pick Up. For 4WD with Stock Height. Also Fits Silverado SS.	Sway Bar Set	2230
GM	2000-2006	2000-2006 GM SUV. 2wd For Vehicles Lowered 3 in.	Sway Bar Set	2249
GM	2000-2006	GM Long Wheel Base SUV For Vehicles Lowered 3 in.	Sway Bar Set	2250
GM	2000-2006	GM Long Wheel Base SUV Sport Sway Bars.	Sway Bar Set	2245
GM	2000-2006	SUV	Sway Bar Set	2240
GM	2000-2006	SUV. 4wd. For Vehicles Lowered 3 in.	Sway Bar Set	2249
GM	2003-2007	H2	Sway Bar Set	2274
GM	2003-2007	H2	Sway Bar Set	2275
GM	2003-2009	H2	Sway Bar Set	2276
GMC	2000-2006	Yukon XL For Vehicles Lowered 3 in.	Sway Bar Set	2250
GMC	2007-2013	Yukon, Yukon XL	Sway Bar Set	2291
Honda	2002-2005	2002-05 Civic Si Hatchbacks	Sway Bar Set Front	22404F
Honda	2002-2005	Civic SI	Comp Sway Bar Set	22405

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Honda	2002-2005	Honda Civic SI	Sway Bar Set Rear	22405R
Honda	2002-2006	SI	End Link Set	25405
Honda	2002-2006	SI	Front End Link Set	25405F
Honda	2002-2006	SI	Rear End Link Set	25405R
Infiniti	2003-2006	G35 Sedan	Sway Bar Set Front	22413F
Infiniti	2003-2007	2003-2007 G35 Coupe	Sway Bar Set Front	22413F
Infiniti	2003-2007	G35	Sway Bar Set	22413
Infiniti	2004-2006	G35X (AWD), V35	Sway Bar Set	22444
Infiniti	2007-2010	G35, G37, G37S	Sway Bar Set	22441
Infiniti	2008-2010	G35X, G37X (AWD)	Sway Bar Set	22443
Lexus	2001-2005	IS300	Sway Bar Set	22410
Lexus	2006-2008	Lexus IS 250 Will not fit 2009 IS250/350 or AWD Models.	Sway Bar Set	22438
Lexus	2006-2008	Lexus IS 350. Will not fit 2009 IS250/350 or AWD Models.	Sway Bar Set	22438
Mazda	2004-2007	Mazda RX-8	Sway Bar Set	22437
Mazda	2004-2007	Mazda RX-8	Sway Bar Set Front	22437F
Mazda	2004-2007	Mazda RX-8	Sway Bar Set Rear	22437R
Mazda	2004-2008	Mazda3	Sway Bar Set Rear	22436R
Mazda	2004-2008	MazdaSpeed3	Sway Bar Set	22436
Mazda	2006-2007	Mazda MX5	Sway Bar Set Rear	22435R
Mazda	2006-2007	MX-5	Sway Bar Set	22435
Mazda	2006-2007	MX-6	Sway Bar Set Front	22436F
Mazda	2006-2007	MX5	Sway Bar Set Front	22435F
Mazda	2007-2009	MazdaSpeed3	Sway Bar Set Rear	22436R
Mitsubishi	2003-2005	EVO 8	Sway Bar Set Rear	22423
Mitsubishi	2006-2007	EVO 9	Sway Bar Set	22423
Mitsubishi	2008-2010	Evo X	Rear End Link Set	25440R
Mitsubishi	2008-2010	EVO X	Sway Bar Set	22440
Mitsubishi	2008-2011	EVO X	Sway Bar Set Front	22440F
Mitsubishi	2008-2011	EVO X	Sway Bar Set Rear	22440R
Mopar	1966-1969	B-Body	End Link Bracket	23366
Mopar	1966-1970	B Body	Mopar LCA Bushings	21366
Mopar	1966-1970	Mopar A Body	Mopar LCA Bushings	21366
Mopar	1966-1970	Mopar E Body	Mopar LCA Bushings	21366
Mopar	1970-1972	B Body	End Link Bracket	23367
Mopar	1970-1974	E Body	Sway Bar Set Rear	2254R
Mopar	1970-1974	E Body. Welding is required.	Sway Bar Set Front	2254F
Mopar	1970-1974	E Body. Welding is required.	Sway Bar Set	2254

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Mopar	1970-1974	E-Body	End Link Bracket	23367
Nissan	2003-2007	350Z	Sway Bar Set	22413
Nissan	2003-2008	2003-2008 350Z	Sway Bar Set Front	22413F
Nissan	2007-2010	370Z	Sway Bar Set	22441
Plymouth	1970	GTX, Roadrunner, Satellite	Stud Dogbone Bolts	17366
Plymouth	1966-1969	GTX, Roadrunner, Satellite	Stud Dogbone Bolts	17366
Plymouth	1966-1970	GTX, Satellite	Sway Bar Set Rear	2255R
Plymouth	1966-1970	Mopar	Sway Bar Set Rear	2255R
Plymouth	1966-1971	Road Runner	Sway Bar Set Rear	2255R
Plymouth	1970-1974	Cuda	Stud Dogbone Bolts	17366
Plymouth	1970-1974	Cuda	Sway Bar Set Rear	2255R
Pontiac	1964-1972	GTO	Sway Bar Set Rear	2202R
Pontiac	1967-1969	Firebird	R Sway Bar Mt Brace	1415
Pontiac	1967-1969	Firebird	Sway Bar Set	2207C
Pontiac	1967-1969	Firebird	Sway Bar Set Rear	2207RC
Pontiac	1993-2002	Firebird	Sway Bar Set Rear	22104R
Pontiac	2004-2006	GTO	Sway Bar Set	2278
Scion	2013	Scion FRS	Front Endlink Kit	25445F
Scion	2013	Scion FRS	Sway Bar Set	22445
Scion	2013	Scion FRS	Sway Bar Set Front	22445F
Scion	2013	Scion FRS	Sway Bar Set Rear	22445R
Scion	2004-2006	Scion xA	Sway Bar Set Front	22414F
Scion	2004-2006	Scion xB	Sway Bar Set Rear	22414R
Scion	2004-2006	Scion xB, xA	Comp Sway Bar Set	22414
Scion	2004-2006	Scion xB, xA	Sway Bar Set Front	22414F
Scion	2004-2007	Scion xA, Scion xB	Sway Bar Set	22412
Scion	2005-2008	Scion TC	Sway Bar Set	22425
Scion	2008-2010	Scion xB	Sway Bar Set	22429
Subaru	2006-2007	WRX	Sway Bar Set	22406
Subaru	2013	BRZ	Front Endlink Kit	25445F
Subaru	2013	BRZ	Sway Bar Set	22445
Subaru	2013	BRZ	Sway Bar Set Front	22445F
Subaru	2013	BRZ	Sway Bar Set Rear	22445R
Subaru	2002-2005	Impreza	Sway Bar Set	22406
Subaru	2002-2006	WRX	End Link Set	25405
Subaru	2002-2006	WRX	Front End Link Set	25405F
Subaru	2002-2006	WRX	Rear End Link Set	25405R
Subaru	2002-2007	WRX	End Link Set	25407
Subaru	2002-2007	WRX	Front End Link Set	25407F
Subaru	2002-2007	WRX	Rear End Link Set	25406R

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Subaru	2002-2007	WRX Sedans	Sway Bar Set Rear	22407R
Subaru	2002-2007	WRX Wagon	End Link Set	25406
Subaru	2002-2007	WRX Wagon	Front End Link Set	25406F
Subaru	2002-2008	WRX	Comp Sway Bar Set	22428
Subaru	2002-2008	WRX	Sway Bar Set	22427
Subaru	2003-2005	Impreza	Comp Sway Bar Set	22407
Subaru	2004-2007	WRX	Comp Sway Bar Set	22407
Subaru	2004-2007	WRX STI	Comp Sway Bar Set	22418
Subaru	2004-2007	WRX STI	Comp Sway Bar Set	22417
Subaru	2004-2007	WRX STI	Sway Bar Set Rear	22417R
Subaru	2004-2007	WRX STI. For competition use only!	Sway Bar Set Rear	22418R
Toyota	2000-2004	Celica	Sway Bar Set	22400
Toyota	2000-2005	Celica	Comp Sway Bar Set	22401
Toyota	2000-2005	Celica	Sway Bar Set Front	22400F
Toyota	2000-2005	Celica. For Use In Competition Only.	Sway Bar Set Rear	22401R
Volkswagen	2004-2005	R32	Sway Bar Set Rear	22804R
Volkswagen	2004-2005	VW R32	Sway Bar Set	22804
Volkswagen	2006-2007	GTI MKIV	Sway Bar Set	22833
Volkswagen	2006-2007	GTI MKIV	Sway Bar Set Front	22833F
Volkswagen	2006-2007	GTI MKIV	Sway Bar Set Rear	22833R
Volkswagen	2006-2008	GTI MKV, Golf MKV, Jetta MKV	Sway Bar Set	22833
Volkswagen	2006-2008	GTI MKV, Golf MKV, Jetta MKV	Sway Bar Set Front	22833F
Volkswagen	2006-2008	GTI MKV, Golf MKV, Jetta MKV	Sway Bar Set Rear	22833R
Volkswagen	2006-2013	MK5, MK6, Golf	Front End Link Set	25348F
Volkswagen	2009-2010	Golf MKVI, GTI MKV, Jetta MKVI	Sway Bar Set	22833
Volkswagen	2009-2010	Golf, GTI MKV, Golf MKV, Jetta MKV	Sway Bar Set Front	22833F
Volkswagen	2009-2010	GTI MKV, Golf MKV, Jetta MKV	Sway Bar Set Rear	22833R
Volkswagen	2010-2011	Jetta TDI	Sway Bar Set	22833
Volkswagen	2010-2011	Jetta TDI	Sway Bar Set Front	22833F
Volkswagen	2010-2011	Jetta TDI	Sway Bar Set Rear	22833R
Volkswagen	2012-2013	Golf R	Sway Bar Set	22837
Volkswagen	1999-2004	Golf, Golf GL, Jetta, Jetta GL, Volkswagen MKIV. Will not work on VR6 models.	Sway Bar Set	22813



Steering Rebuild Kits

Steering Rebuild Kits

Worn out steering parts cause poor performance and put your safety at risk. Don't trust your new performance suspension to work correctly with old worn ball joints, center links, idler arms and more. Upgrade your Muscle Cars suspension with one of our Premium Steering Rebuild Kits. We have sourced the highest quality steering components and placed them in a convenient package. Note: Kits do not include Tie Rod Sleeves

Steering Rebuild Kits

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1966	Skylark	Steering Rebuild Kit	CHESTR002
Buick	1968-1970	Skylark	Steering Rebuild Kit	CHESTR014
Buick	1971-1972	Skylark	Steering Rebuild Kit	CHESTR024
Buick	1978-1987	Grand National, Regal	Steering Rebuild Kit	CHESTR011
Buick	1993-1996	Roadmaster	Steering Rebuild Kit	BUISTR003
Chevrolet	1967	Camaro with Manual Steering	Steering Rebuild Kit	CHESTR063
Chevrolet	1967	Camaro with Power Steering	Steering Rebuild Kit	CHESTR065
Chevrolet	1967	Chevelle with 7/8 Diameter Center Link	Steering Rebuild Kit	CHESTR003
Chevrolet	1967	El Camino with 7/8 Diameter Center Link	Steering Rebuild Kit	CHESTR003
Chevrolet	1967	Malibu with 7/8 Diameter Center Link	Steering Rebuild Kit	CHESTR003
Chevrolet	1970	Monte Carlo	Steering Rebuild Kit	CHESTR014
Chevrolet	1955-1957	Bel Air w/ Manual Steering	Steering Rebuild Kit	CHESTR004
Chevrolet	1955-1957	Bel Air with Power Steering	Steering Rebuild Kit	CHESTR005
Chevrolet	1964-1965	Chevelle	Steering Rebuild Kit	CHESTR002
Chevrolet	1964-1966	Chevelle with 7/8 Diameter Center Link	Steering Rebuild Kit	CHESTR003
Chevrolet	1964-1966	El Camino, Malibu	Steering Rebuild Kit	CHESTR002
Chevrolet	1964-1966	Malibu with 7/8 Diameter Center Link	Steering Rebuild Kit	CHESTR003
Chevrolet	1967-1969	Camaro	Steering Rebuild Kit	CHESTR040
Chevrolet	1968-1969	Camaro	Steering Rebuild Kit	CHESTR041
Chevrolet	1968-1970	El Camino, Malibu, Chevelle	Steering Rebuild Kit	CHESTR014

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1968-1974	Nova	Steering Rebuild Kit	CHESTR040
Chevrolet	1968-1974	Nova	Steering Rebuild Kit	CHESTR041
Chevrolet	1970-1981	Camaro w Power Steering	Steering Rebuild Kit	CHESTR018
Chevrolet	1971-1972	El Camino, Malibu, Chevelle, Monte Carlo	Steering Rebuild Kit	CHESTR024
Chevrolet	1978-1983	Malibu	Steering Rebuild Kit	CHESTR011
Chevrolet	1978-1987	El Camino	Steering Rebuild Kit	CHESTR011
Chevrolet	1978-1988	Monte Carlo	Steering Rebuild Kit	CHESTR011
Chevrolet	1978-1996	Caprice, Impala	Steering Rebuild Kit	CHESTR010
Chevrolet	1982-1992	Camaro	Steering Rebuild Kit	CHESTR033
Chevrolet	1993-1997	Camaro	Steering Rebuild Kit	CHESTR034
Chevrolet	1998-2002	Camaro	Steering Rebuild Kit	CHESTR034
GMC	1978-1987	Caballero	Steering Rebuild Kit	CHESTR011
Oldsmobile	1967	442, Cutlass	Steering Rebuild Kit	CHESTR013
Oldsmobile	1964-1966	442	Steering Rebuild Kit	CHESTR002
Oldsmobile	1964-1966	442	Steering Rebuild Kit	CHESTR013
Oldsmobile	1964-1966	Cutlass	Steering Rebuild Kit	CHESTR002
Oldsmobile	1964-1966	Cutlass	Steering Rebuild Kit	CHESTR013
Oldsmobile	1968-1970	442, Cutlass	Steering Rebuild Kit	CHESTR014
Oldsmobile	1971-1972	442, Cutlass	Steering Rebuild Kit	CHESTR024
Oldsmobile	1979-1981	Cutlass	Steering Rebuild Kit	CHESTR011
Pontiac	1967	Firebird	Steering Rebuild Kit	CHESTR066
Pontiac	1967	GTO, LeMans, Tempest	Steering Rebuild Kit	CHESTR013
Pontiac	1968	Firebird	Steering Rebuild Kit	CHESTR064
Pontiac	1969	Firebird	Steering Rebuild Kit	CHESTR067
Pontiac	1964-1965	LeMans with 13/16 in. Diameter Center Link.	Steering Rebuild Kit	CHESTR002
Pontiac	1964-1965	Tempest with 13/16 in. Diameter Center Link.	Steering Rebuild Kit	CHESTR002
Pontiac	1964-1966	GTO, LeMans, Tempest	Steering Rebuild Kit	CHESTR013
Pontiac	1968-1970	GTO, LeMans, Tempest	Steering Rebuild Kit	CHESTR014
Pontiac	1970-1981	Firebird	Steering Rebuild Kit	CHESTR050
Pontiac	1971-1972	GTO, LeMans	Steering Rebuild Kit	CHESTR024
Pontiac	1978-1981	Lemans	Steering Rebuild Kit	CHESTR011
Pontiac	1978-1988	Grand Prix	Steering Rebuild Kit	CHESTR011
Pontiac	1982-1992	Firebird	Steering Rebuild Kit	CHESTR033
Pontiac	1993-1997	Firebird	Steering Rebuild Kit	CHESTR034
Pontiac	1998-2002	Firebird	Steering Rebuild Kit	CHESTR034

Center Links

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1966	Skylark	Cntr Link Non E Coat	106-10060

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1966-1967	Skylark	Cntr Link Non E Coat	106-10063
Buick	1968-1972	Skylark	Cntr Link E Coat	106-10062
Buick	1978-1988	Grand National, Regal	Cntr Link E Coat	106-10071
Chevrolet	1964-1966	Chevelle, El Camino, Malibu	Cntr Link Non E Coat	106-10060
Chevrolet	1964-1967	Chevelle, El Camino, Malibu	Cntr Link E Coat	106-10061
Chevrolet	1968-1972	Chevelle, El Camino, Malibu, Monte Carlo	Cntr Link E Coat	106-10062
Chevrolet	1970-1981	Camaro	Cntr Link Non E Coat	106-10066
Chevrolet	1978-1988	El Camino, Malibu, Monte Carlo	Cntr Link E Coat	106-10071
Chevrolet	1978-1996	Impala, Caprice	Cntr Link E Coat	106-10069
Chevrolet	1982-1992	Camaro	Cntr Link Non E Coat	106-10011
GMC	1978-1988	Caballero	Cntr Link E Coat	106-10071
Oldsmobile	1964-1966	442, Cutlass	Cntr Link Non E Coat	106-10060
Oldsmobile	1966-1967	442, Cutlass	Cntr Link Non E Coat	106-10063
Oldsmobile	1968-1972	442, Cutlass	Cntr Link E Coat	106-10062
Oldsmobile	1978-1988	Cutlass	Cntr Link E Coat	106-10071
Pontiac	1966-1967	GTO, LeMans	Cntr Link Non E Coat	106-10063
Pontiac	1968-1972	GTO, LeMans, Tempest	Cntr Link E Coat	106-10062
Pontiac	1970-1981	Firebird	Cntr Link E Coat	106-10067
Pontiac	1978-1988	LeMans, Grand Prix	Cntr Link E Coat	106-10071
Pontiac	1982-1992	Firebird	Cntr Link Non E Coat	106-10011

Ball Joints

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Buick Skylark For use with 70-81 F-Body or 78-96 B Body Spindle Conversions.	Lower Ball Joint	1155
Buick	1964-1972	Skylark	Ball Joint Kit	CHEBAL001
Buick	1968-1974	Apollo.	Ball Joint Kit	CHEBAL001
Buick	1978-1987	Grand National, Regal	Ball Joint Kit	CHEBAL004
Chevrolet	1955-1957	Bel Air	Ball Joint Kit	CHEBAL002
Chevrolet	1964-1972	Chevelle, ElCamino, Malibu For use with 70-81 F-Body or 78-96 B Body Spindle Conversions.	Lower Ball Joint	1155
Chevrolet	1964-1972	El Camino, Malibu, Chevelle	Ball Joint Kit	CHEBAL001
Chevrolet	1967-1969	Camaro	Ball Joint Kit	CHEBAL001

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1968-1974	Nova	Ball Joint Kit	CHEBAL001
Chevrolet	1970-1981	Camaro	Ball Joint Kit	CHEBAL004
Chevrolet	1978-1983	Malibu	Ball Joint Kit	CHEBAL004
Chevrolet	1978-1987	El Camino	Ball Joint Kit	CHEBAL004
Chevrolet	1978-1988	Monte Carlo	Ball Joint Kit	CHEBAL004
Chevrolet	1978-1990	Caprice	Ball Joint Kit	CHEBAL004
Chevrolet	1982-1992	Camaro	Ball Joint Kit	CHEBAL005
Chevrolet	1982-1992	Camaro	Ball Joint Kit	CHEBAL006
Chevrolet	1991-1996	Impala, Caprice	Ball Joint Kit	CHEBAL004
GM	1964-1972	GM A-Body	Ball Joint Kit	CHEBAL001
GM	1967-1969	F-Body	Ball Joint Kit	CHEBAL001
GM	1968-1974	X-Body	Ball Joint Kit	CHEBAL001
Oldsmobile	1964-1972	442	Ball Joint Kit	CHEBAL001
Oldsmobile	1964-1972	Oldsmobile Cutlass, 442, For use with 70-81 F-Body or 78-96 B Body Spindle Conversions.	Lower Ball Joint	1155
Pontiac	1964-1972	GTO, LeMans, Tempest	Ball Joint Kit	CHEBAL001
Pontiac	1964-1972	GTO, LeMans, Tempest For use with 70-81 F-Body or 78-96 B Body Spindle Conversions.	Lower Ball Joint	1155
Pontiac	1967-1969	Firebird	Ball Joint Kit	CHEBAL001
Pontiac	1970-1981	Firebird	Ball Joint Kit	CHEBAL004
Pontiac	1982-1992	Firebird	Ball Joint Kit	CHEBAL005
Pontiac	1982-1992	Firebird	Ball Joint Kit	CHEBAL006



Machined Tie Rod Sleeves

Enhance steering precision and make quicker and easier toe alignment changes with our Machined Tie Rod Adjusting Sleeves. They feature machined hex steel bodies, heavy duty jam nuts, and are finished in durable gloss black powder coat.

Tie Rod Ends and Sleeves

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1970	Skylark	Inner Tie Rod End	104-10382
Buick	1964-1970	Skylark	Outer Tie Rod End	104-10182
Buick	1971-1972	Skylark	Inner Tie Rod End	104-10016

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1971-1972	Skylark	Outer Tie Rod End	104-10360
Buick	1978-1987	Grand National, Buick Regal	Outer Tie Rod End	104-10019
Buick	1978-1987	Grand National, Regal	Inner Tie Rod End	104-10020
Chevrolet	1963-1972	2wd Pickup trucks	Tie Rod Sleeves	16391
Chevrolet	1963-1972	2wd Pickup trucks using 73-87 spindles. This sleeve converts 5/8 in. inner thread to 11/16 in. outer thread	Tie Rod Sleeves	16390
Chevrolet	1964-1970	Chevelle, El Camino, Malibu, Monte Carlo	Inner Tie Rod End	104-10382
Chevrolet	1964-1970	Chevelle, El Camino, Malibu, Monte Carlo	Outer Tie Rod End	104-10182
Chevrolet	1965-1970	B-Body	Tie Rod Sleeves	1607
Chevrolet	1967-1969	Camaro	Inner Tie Rod End	104-10382
Chevrolet	1967-1969	Camaro	Outer Tie Rod End	104-10348
Chevrolet	1967-1969	Chevrolet Camaro	Outer Tie Rod End	104-10011
Chevrolet	1968-1974	Nova	Outer Tie Rod End	104-10348
Chevrolet	1968-1974	Nova	Tie Rod Sleeves	1607
Chevrolet	1968-1974	Nova	Inner Tie Rod End	104-10382
Chevrolet	1970-1981	Camaro	Drvr Innr Tie Rd End	104-10374
Chevrolet	1970-1981	Camaro	Outer Tie Rod End	104-10373
Chevrolet	1970-1981	Camaro	Pass Innr Tie Rd End	104-10375
Chevrolet	1971-1972	Chevelle, El Camino	Inner Tie Rod End	104-10016
Chevrolet	1971-1972	Chevelle, El Camino, Malibu, Monte Carlo	Outer Tie Rod End	104-10360
Chevrolet	1978-1983	Malibu	Inner Tie Rod End	104-10020
Chevrolet	1978-1983	Malibu	Outer Tie Rod End	104-10019
Chevrolet	1978-1987	El Camino	Inner Tie Rod End	104-10020
Chevrolet	1978-1987	El Camino	Outer Tie Rod End	104-10019
Chevrolet	1978-1988	Monte Carlo	Inner Tie Rod End	104-10020
Chevrolet	1978-1988	Monte Carlo	Outer Tie Rod End	104-10019
Chevrolet	1978-1996	Impala, Caprice	Outer Tie Rod End	104-10015
Chevrolet	1982-1992	Camaro	Inner Tie Rod End	104-10058
Chevrolet	1982-1992	Camaro	Outer Tie Rod End	104-10057
Chevrolet	1982-1992	Camaro	Outer Tie Rod End	104-10161
Chevrolet	1993-2002	Camaro	Inner Tie Rod End	104-10420

MAKE	YEAR	MODEL	DESCRIPTION	PART #
GM	1964-1970	A-Body	Tie Rod Sleeves	1601
GM	1971-1977	A-Body	Tie Rod Sleeves	1612
GM	1978-1988	A/G Body	Tie Rod Sleeves	1601
GM	1978-1996	B-Body	Tie Rod Sleeves	1612
GM	1982-1992	F-Body.	Tie Rod Sleeves	1601
GMC	1963-1972	C-10 2wd Pickup trucks	Tie Rod Sleeves	16391
GMC	1963-1972	C-10 2wd Pickup trucks using 73-87 spindles. This sleeve converts 5/8 in. inner thread to 11/16 in. outer thread	Tie Rod Sleeves	16390
GMC	1978-1987	Caballero	Outer Tie Rod End	104-10019
GMC	1978-1987	GMC Caballero	Inner Tie Rod End	104-10020
Oldsmobile	1964-1970	442, Cutlass	Outer Tie Rod End	104-10182
Oldsmobile	1964-1970	442, Cutless	Inner Tie Rod End	104-10382
Oldsmobile	1971-1972	442, Cutlass	Outer Tie Rod End	104-10360
Oldsmobile	1979-1981	Cutlass	Inner Tie Rod End	104-10020
Oldsmobile	1979-1981	Oldsmobile Cutlass	Outer Tie Rod End	104-10019
Pontiac	1969	Firebird	Drvr Innr Tie Rd End	104-10530
Pontiac	1969	Firebird	Pass Innr Tie Rd End	104-10531
Pontiac	1964-1970	GTO, LeMans, Tempest	Outer Tie Rod End	104-10182
Pontiac	1964-1970	GTO, LeMans, Tempest	Inner Tie Rod End	104-10382
Pontiac	1967-1969	F-Body (Some 1969 Firebirds Require #1612 verify size of stock sleeve)	Tie Rod Sleeves	1607
Pontiac	1967-1969	Firebird	Inner Tie Rod End	104-10382
Pontiac	1968-1974	Firebird	Outer Tie Rod End	104-10348
Pontiac	1970-1981	Firebird	Drvr Innr Tie Rd End	104-10374
Pontiac	1970-1981	Firebird	Outer Tie Rod End	104-10373
Pontiac	1970-1981	Firebird	Pass Innr Tie Rd End	104-10375
Pontiac	1971-1972	GTO, LeMans	Outer Tie Rod End	104-10360
Pontiac	1978-1981	Lemans	Inner Tie Rod End	104-10020
Pontiac	1978-1981	Lemans	Outer Tie Rod End	104-10019
Pontiac	1978-1988	Grand Prix	Inner Tie Rod End	104-10020
Pontiac	1978-1988	Grand Prix	Outer Tie Rod End	104-10019
Pontiac	1982-1992	Firebird	Inner Tie Rod End	104-10058
Pontiac	1982-1992	Firebird	Outer Tie Rod End	104-10057
Pontiac	1982-1992	Firebird	Outer Tie Rod End	104-10161
Pontiac	1993-2002	Firebird	Inner Tie Rod End	104-10420



Adjustable Steering Rod Kits

Dramatically improves the cornering performance, traction, and steering response. Designed to be used in conjunction with Hotchkis Sport Suspension A-Arms to reduce bump steer, our Steering Rods improve responsiveness and driver control. They are finished in a lustrous nickel-look powder coated finish blending form and function. Proudly designed, track tested and manufactured in the USA.

Adjustable Steering Rod Kit

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Dodge	1967-1976	Dart	Adj Steering Rod Kit	16385
Dodge	1970-1976	Duster	Adj Steering Rod Kit	16385
Dodge	1971-1972	Demon	Adj Steering Rod Kit	16385
Plymouth	1967-1969	Barracuda	Adj Steering Rod Kit	16385
Plymouth	1967-1976	Valiant	Adj Steering Rod Kit	16385
Plymouth	1971-1976	Scamp	Adj Steering Rod Kit	16385

Idler Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Buick	1964-1972	Skylark	Idler Arm	102-10006
Chevrolet	1967	Camaro	Idler Arm	102-10003
Chevrolet	1967	Chevelle, El Camino, Malibu	Idler Arm	102-10005
Chevrolet	1964-1966	Chevelle, Malibu	Idler Arm	102-10005
Chevrolet	1964-1972	Chevelle, El Camino, Malibu	Idler Arm	102-10006
Chevrolet	1968-1969	Camaro	Idler Arm	102-10008
Chevrolet	1968-1974	Nova	Idler Arm	102-10008
Chevrolet	1970-1981	Camaro	Idler Arm Non E Coat	102-10012
Chevrolet	1978-1996	Caprice, Impla	Idler Arm	102-10013
Chevrolet	1982-1992	Camaro	Idler Arm	102-10017
Oldsmobile	1964-1972	Cutlass, 442	Idler Arm	102-10006

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Pontiac	1967	Firebird	Idler Arm	102-10003
Pontiac	1964-1972	GTO	Idler Arm	102-10006
Pontiac	1964-1972	LeMans, Tempest	Idler Arm	102-10006
Pontiac	1968-1969	Firebird	Idler Arm	102-10008
Pontiac	1970-1981	Firebird	Idler Arm Non E Coat	102-10012
Pontiac	1982-1992	Firebird	Idler Arm	102-10017

Pitman Arms

MAKE	YEAR	MODEL	DESCRIPTION	PART #
Chevrolet	1967-1969	Camaro	Pitman Arm	103-10012
Chevrolet	1967-1969	Camaro	Pitman Arm Man Steer	103-10001
Chevrolet	1968-1974	Nova	Pitman Arm	103-10012
Chevrolet	1968-1974	Nova	Pitman Arm Man Steer	103-10001
Dodge	1973-1974	Challenger	Pitman Arm	103-10015
Mopar	1966-1976	A Body cars. May not clear aftermarket headers except Schumacher Tri-Y and 440 (High Deck).	Pitman/Idler Arm Kit	3004
MOPAR	1966-1976	A-Body cars using A-Body 1973-1976 Center link and spindles. May not clear aftermarket headers except Schumacher Tri-Y and 440 (High Deck).	Pitman/Idler Arm Kit	3004
Mopar	1966-1976	B Body cars. May not clear aftermarket headers except Schumacher Tri-Y and 440 (High Deck).	Pitman/Idler Arm Kit	3004
MOPAR	1966-1976	B-Body May not clear aftermarket headers except Schumacher Tri-Y and 440 (High Deck).	Pitman/Idler Arm Kit	3004
Mopar	1966-1976	E Body cars. May not clear aftermarket headers except Schumacher Tri-Y and 440 (High Deck).	Pitman/Idler Arm Kit	3004
MOPAR	1970-1974	E Body cars May not clear aftermarket headers except Schumacher Tri-Y and 440 (High Deck).	Pitman/Idler Arm Kit	3004
Plymouth	1973-1974	Barracuda	Pitman Arm	103-10015

SUSPENSION POWER



Power for your suspension starts with the tire. Wider, high profile tires and lower profile ultra performance tires each have different suspension needs. Your muscle car will have different needs than your sports car or SUV. But the basic design principles are the same.

- Get each tire contact patch working as effectively as possible
- Get all four contact patches working together for optimum handling balance, responsiveness and maximum performance
- Optimize ride quality without reaching harsh levels

HOTCHKIS TOTAL VEHICLE SYSTEM - TVS

To achieve MAX vehicle performance, integrated suspension engineering must take into account the entire vehicle, including the following:

- Tires and wheels that are optimized for the vehicle platform and intended use
- Springs
- Sway bars
- Bushings
- Shock absorbers
- Suspension control arms
- Chassis bracing

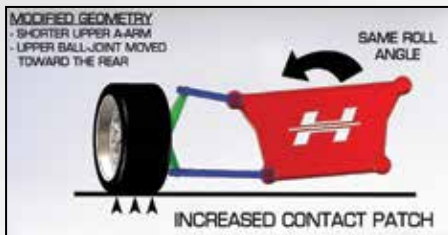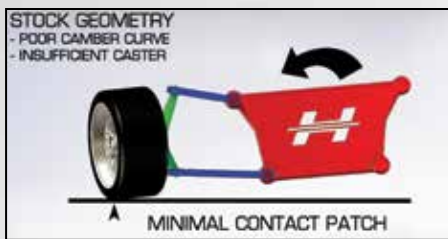

To improve handling, all suspension components must be integrated as a part of a TOTAL VEHICLE SYSTEM to keep the tire tread flat on the ground during cornering, acceleration and braking.

Each must be developed for the intended use of the vehicle. The engineer must consider every aspect of the vehicle:

- Engine power output
- Transmission and driveline
- Front, rear or all wheel drive
- Steering characteristics
- Cost

In some cases, a portion of the existing suspension can be utilized. In other cases, like 60's muscle cars originally fitted with bias ply tires, new geometry corrected a-arms are necessary because they are designed to take advantage of modern radial tire technology. Without taking each vehicles suspension component into account, the most powerful suspension system will not be realized. That is why the TOTAL VEHICLE SYSTEM engineering approach is so important for MAX horsepower for your suspension.



Keeping the load even across the tire contact patch means maximum traction.

HOTCHKIS INTEGRATED SUSPENSION ENGINEERING


The first step is, engineering the correct spring rates for optimum control of the tire over bumps while allowing the vehicle to be lowered for improved performance and appearance. Then, sway bar rates are determined for ideal handling balance for a wide range of performance driving conditions. Shock absorber valving rates are evaluated and the optimum tuned shocks are developed. New suspension trailing arms and a-arms are designed to improve geometry. Suspension bushings are replaced with more rigid units to reduce compliance and improve responsiveness. Chassis strength is analyzed and new chassis bracing is developed.

During the design process, several key parameters must be factored into the overall equation.

TIRE CONTACT PATCH COMPLIANCE

Each tire contact patch generates the most traction when is it flat on the road surface during cornering, braking, and acceleration. Suspension geometry must be analyzed for:

- Camber change (the tilt of the tire from vertical when viewed from the front) during suspension travel
- Camber change during body roll
- Bumpsteer (Toe changes during suspension travel)
- Amount of caster necessary for crisp performance handling

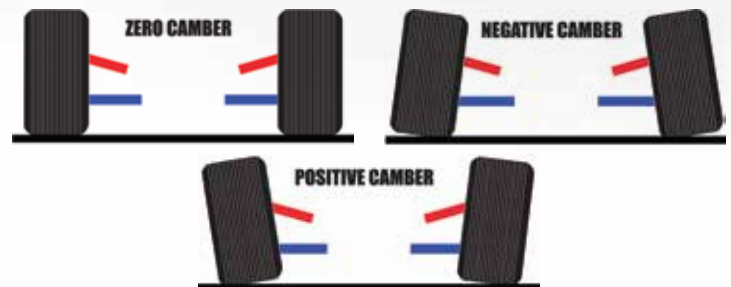

RIDE CONTROL

The springs and shocks must be engineered to:

- Lower the car
- Control the spring energy
- Keep the car from bottoming out either on the suspension or the road
- Ride rates must be engineered for handling balance, tire compliance with the road and ride comfort for passengers



HANDLING BALANCE

The front to rear optimum handling balance must be engineered to create a neutral feel for maximum traction and responsiveness. A combination of spring and sway bar rates are used to achieve a neutral balance while cornering. If the combination of front bar and spring rate is too high relative to the rear, the car will push or understeer in corners. This means that the front tires will slide before the rear tires. The opposite occurs (loose condition of over steer) when the combination of rear sway bar and spring rate is too high relative the front. Perfectly engineered sway bar and spring rates will create neutral handling and the maximum amount of traction available from the tires.



ITS ALL ABOUT TRACTION

For aggressive performance tires to work, the suspension system must be engineered to keep the contact patches equally loaded on the road surface and get all four tire contact patches working for optimum traction.

Tire traction increases as the load on that tire increases. When weight transfers from the inside to outside tires during cornering, or from front to rear during acceleration, or from rear to front while braking, weight is reduced on one pair of tires and increased on the opposite pair. Simply, excessive weight transfer when cornering hurts tire traction.

Lowering the center of gravity by lowering the vehicle reduces weight transfer and allows more of the tire's traction capacity to be used for increased cornering



After getting each tire contact patch equally loaded across its width, the goal is to have all four tires equally loaded as much of the time as possible.

speed, braking and acceleration. Properly engineered suspension geometry must allow the tires to stay level with the road surface. The spring and sway bar rates, which determine where weight is transferred, must be engineered to allow neutral handling balance, which means that all four tires are working to maximum possible performance. Thus giving the driver maximum driving confidence on the street or track. Integrated suspension engineering takes all of these factors into account when a system is created.

TIRE CONTACT PATCH



Each tire makes the most traction when the contact patch is equally loaded across its entire width. These illustrations show how the contact patch can be unequally loaded due to pressure or camber adjustments.

WHAT SUSPENSION DOES

SPRINGS

Springs perform several basic functions.

- They keep the chassis from bottoming on the road and the suspension from bottoming out when bumps and ruts are encountered
- They contribute to body roll control
- They influence where weight gets transferred (front vs. rear) while cornering, accelerating and braking



Each of these factors has considerable influence on the handling characteristics of the car.


Spring rates are engineered with several thoughts in mind. For production vehicles where ground clearance and ride quality are considered more important than performance, springs are taller and spring rates softer. For performance-oriented production vehicles, spring rates are more aggressive and the chassis tends to be lower. But the end results still favors comfort over performance. For the high performance vehicle enthusiast, the compromises move away from comfort to improved braking performance, better acceleration and launch control and higher cornering speeds. Increased rate springs allow a vehicle platform to be lowered while still keeping the chassis from bottoming.

Lowering the chassis lowers the center of gravity and improves cornering, braking and acceleration performance. Stiffer springs also reduce body roll in turns, and improve chassis responsiveness. On extremely bumpy surfaces, traction may be compromised with stiffer springs due to the chassis skating over bumps and ruts. This is why off-road vehicles need lots of travel and soft springs. But stiffer well-engineered springs will improve on-road performance and look. Improperly engineered or cut stock springs can cause bottoming, excessively harsh ride quality and traction loss over bumps.


SWAY BARS

- Control chassis lean/roll while cornering
- Allow for handling balance changes to reach optimum driving performance
- When optimized, do not affect ride quality while the vehicle is traveling straight
- Connect one side of the front or rear suspension to the other and resists chassis roll by acting as a torsion spring
- The stiffer the sway bar rate the more resistance and therefore, less chassis roll

Sway bars control body roll while cornering. Larger, stiffer sway bars reduce body roll and help keep the tire contact patches flat on the road surface when cornering.

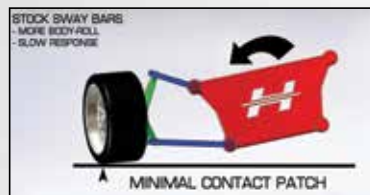

Lighter weight hollow sway bars offer significant performance advantages over heavier solid sway bars. Hollow sway bars can have equal torsional resistance compared to solid sway bars thus offering optimum handling balance without excessive weight. A must for performance driving.

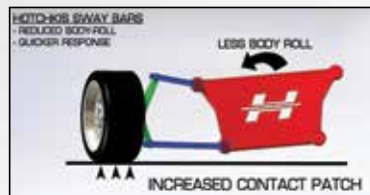

Additionally, the sway bars (along with the springs) affect where weight is transferred while cornering. This makes the sway bar an excellent tool for fine-tuning the handling balance.

Proper engineering and testing are crucial for sway bar designs to ensure optimum handling balance



Hotchkis wheels are great for modern muscle cars!

Hotchkis-Tuned 1.5 Street Performance Shocks by Fox!



SHOCK ABSORBERS

Shock absorbers control or affect:

- Spring oscillations (bouncing-energy)
- Tire contact control over bumps and ruts
- Responsiveness to driver control inputs (steering, brakes, throttle)
- How fast weight transfers in a turn, while braking or accelerating
- How fast weight transfers back when steering, brake or throttle inputs are stopped or reduced

The primary task of the shock absorber is to control spring movements so that oscillations are kept to one cycle when bumps are encountered. If shocks are too soft (or worn out), the chassis will bounce several times when bumps are hit. If shocks are too stiff, the shock will not allow the spring/shock to keep the tire contact patch on the road surface over bumps.

Shocks also have a tremendous influence on handling characteristics. Shock valving works in two directions, bump (compression) and rebound (extension). Bump travel generally controls wheel movements while rebound travel controls chassis movements. Proper control requires different shock valving ratios, specifically more rebound than bump. Additionally, shocks have valving the works at different shaft speeds, usually high, medium, and slow. High and medium speed comes into play over bumps and ruts. The lower shaft speeds kick in when weight is being transferred during cornering, braking, and acceleration.

The shock absorber through valving and construction must be compatible with the spring rate to work effectively. Shock technology has jumped dramatically in the last decade and therefore good shocks are essential to the success of any project car.

For further technical information please see our website or give us a call.

HOTCHKIS[®] SPORT SUSPENSION



- A-ARMS
- PERFORMANCE SPRINGS
- REAR SUSPENSION
- STEERING REBUILD KITS
- SWAY BARS
- TVS KITS
- CHASSIS BRACING
- HOTCHKIS TUNED SHOCKS

Santa Fe Springs CA | Mooresville NC

